



NRGence™ eco PDU PE Series
PE5220s / PE5312sGL / PE5312sGR / PE5340s
Power Distribution Unit
User Manual

FCC, CE Information

FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

CE Warning: This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

RoHS

This product is RoHS compliant.

SJ/T 11364-2006

The following contains information that relates to China.

部件名称	有毒有害物质或元素					
	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
电器部件	●	○	○	○	○	○
机构部件	○	○	○	○	○	○

- : 表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T 11363-2006规定的限量要求之下。
- : 表示符合欧盟的豁免条款，但该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T 11363-2006的限量要求。
- ×: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T 11363-2006的限量要求。



User Information

Online Registration

Be sure to register your product at our online support center:

International	http://eservice.aten.com
---------------	---

Telephone Support

For telephone support, call this number:

International	886-2-8692-6959
China	86-10-5255-0110
Japan	81-3-5615-5811
Korea	82-2-467-6789
North America	1-888-999-ATEN ext 4988
United Kingdom	44-8-4481-58923

User Notice

All information, documentation, and specifications contained in this manual are subject to change without prior notification by the manufacturer. The manufacturer makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties as to merchantability or fitness for any particular purpose. Any of the manufacturer's software described in this manual is sold or licensed *as is*. Should the programs prove defective following their purchase, the buyer (and not the manufacturer, its distributor, or its dealer), assumes the entire cost of all necessary servicing, repair and any incidental or consequential damages resulting from any defect in the software.

The manufacturer of this system is not responsible for any radio and/or TV interference caused by unauthorized modifications to this device. It is the responsibility of the user to correct such interference.

The manufacturer is not responsible for any damage incurred in the operation of this system if the correct operational voltage setting was not selected prior to operation. PLEASE VERIFY THAT THE VOLTAGE SETTING IS CORRECT BEFORE USE.

PE Device Safety Notice



- ◆ Set the maximum permissible breaker protection in the building circuitry to the current rating specified on the rating plate. Observe all national regulations and safety codes as well as deviations for breakers.
- ◆ Only connect the PE Device to a grounded power outlet or a grounded system!
- ◆ Make sure that the total current input of the connected systems does not exceed the current rating specified on the rating plate of the PE Device.
- ◆ There is a risk of explosion if the battery is replaced with an incorrect type. Dispose of used batteries according to the relevant instructions.

Consignes de sécurité relatives à l'unité PE



- ◆ Installez sur le circuit du bâtiment des disjoncteurs permettant d'assurer la protection maximale autorisée, en respectant le courant nominal spécifié sur la plaque signalétique. Veuillez respecter l'ensemble des réglementations nationales en vigueur et des codes de sécurité ainsi que les déviations recommandées pour les disjoncteurs.
- ◆ Ne connectez l'unité PE qu'à une prise de courant avec borne de terre ou à un système mis à la terre!
- ◆ Assurez-vous que le courant d'entrée total des systèmes connectés ne dépasse pas le courant nominal spécifié sur la plaque signalétique de l'unité PE.
- ◆ Il existe un risque d'explosion si la batterie est remplacée par une batterie de type incorrect. Jetez les batteries usagées en respectant les instructions adéquates.

Package Contents

The eco PDU PE Series package consists of:

- 1 PE5220s, PE5312sGL, PE5312sGR, or PE5340s Power Distribution Unit
- 1 Power Cord (PE5220s only)
- 1 Rack Mount Kit
- 1 User Instructions*
- 1 CD-ROM

Check to make sure that all of the components are present and in good order. If anything is missing, or was damaged in shipping, contact your dealer.

Read this manual thoroughly and follow the installation and operation procedures carefully to prevent any damage to the eco PDU or other devices on the installation.

* Features may have been added to the eco PDU since this manual was published. Please visit our website to download the most up-to-date version.

Copyright © 2013 ATEN® International Co., Ltd.

Manual Date: 2013-12-23

NRGence and the NRGence logo are registered trademarks of ATEN International Co., Ltd. All rights reserved.
All other brand names and trademarks are the registered property of their respective owners.

Contents

FCC, CE Information	ii
SJ/T 11364-2006	ii
User Information	iii
Online Registration	iii
Telephone Support	iii
User Notice	iii
PE Device Safety Notice	iv
Consignes de sécurité relatives à l'unité PE	iv
Package Contents	v
About This Manual	ix
Conventions	ix
Product Information	x

Chapter 1.

Introduction

Overview	1
Comparison Charts	3
PE5220sA / PE5220sB / PE5220sA-AX-J / PE5220sB-AX-J / PE5220sG Comparison Chart	3
PE5312sGL / PE5312sGR Comparison Chart	3
PE5340sB / PE5340sG / PE5340sJ Comparison Chart	4
Features	5
Power Distribution	5
Remote Access	5
Operation	5
Management	6
Security	6
eco Sensors Energy Management Software*	6
Requirements	7
Optional Accessories	8
Sensors	8
Cable Holders	8
Components	9
PE5220sB-AX-J / PE5220sB / PE5220sG Front View	9
PE5220sA-AX-J / PE5220sA Front View	11
PE5312sGL Front View	13
PE5312sGR Front View	15
PE5340s Front View	17
PE5220s Readout Section	19
PE5312s / PE5340s Readout Section	20

Chapter 2.

Hardware Setup

Before You Begin	21
------------------------	----

Rack Mounting	21
PDU Placement	22
Installation	23
Securing the Cables	25
Securing the Sensors	26

Chapter 3.

Basic Operation and

First Time Setup

Operation Methods	27
Browser	27
eco Sensors	27
SNMP	27
First Time Setup	28
Network Configuration	29
Changing the Administrator Login	30
Moving On	30

Chapter 4.

Browser Operation

Logging In	31
The eco PDU Main Page	32
Page Components	32
Outlet Access	34
Connections	34
Bank Status	36
Configuration	37
User	38
Administrator Information	38
User Information	39
Log	40
The System Log Event List	40
Setup	41
Device Configuration	41
Date/Time	47
Security	49
Login Failures	49
Working Mode	49
Account Policy	50
Login String / IP Filter / Mac Filter	51
Authentication & Authorization	54
Private Certificate	56
PDU	57
Firmware File	57
Backup/Restore	59

Appendix

Safety Instructions	61
General	61
Consignes de sécurité	63
Général	63
Rack Mounting	66
The eco PDU's Main Power Cord	66
Securing the Power Cables	66
Montage sur bâti	67
Le cordon d'alimentation principale de l'unité d'alimentation éco . . .	67
Fixation des câbles d'alimentation	67
Technical Support	69
International	69
North America	69
IP Address Determination	70
Specifications	72
PE5220sA / PE5220sA-AX-J	72
PE5220sB / PE5220sB-AX-J	73
PE5220sG	74
PE5312sGL	75
PE5312sGR	76
PE5340sB / PE5340sJ	77
PE5340sG	78
Administrator Login Failure	79
Limited Warranty	80

About This Manual

This User Manual is provided to help you get the most from your eco PDU system. It covers all aspects of installation, configuration and operation. An overview of the information found in the manual is provided below.

Chapter 1, *Introduction*, introduces you to the eco PDU system. Its purpose, features and benefits are presented, and its front and back panel components are described.

Chapter 2, *Hardware Setup*, provides step-by-step instructions for setting up your installation.


Chapter 3, *Basic Operation and First Time Setup*, explains the procedures that the Administrator employs to set up the eco PDU network environment, and change the default username and password.

Chapter 4, *Browser Operation*, describes how to log in to the eco PDU with an internet browser, and explains the layout and components of the eco PDU's user interface.

An Appendix, provides specifications and other technical information regarding the eco PDU.

Conventions

This manual uses the following conventions:

Monospaced	Indicates text that you should key in.
[]	Indicates keys you should press. For example, [Enter] means to press the Enter key. If keys need to be chorded, they appear together in the same bracket with a plus sign between them: [Ctrl+Alt].
1.	Numbered lists represent procedures with sequential steps.
◆	Bullet lists provide information, but do not involve sequential steps.
→	Indicates selecting the option (on a menu or dialog box, for example), that comes next. For example, Start → Run means to open the <i>Start</i> menu, and then select <i>Run</i> .
	Indicates critical information.

Product Information

For information about all NRGence™ products and how they can help you save money in the data center, visit NRGence™ on the Web or contact an ATEN Authorized Reseller. Visit ATEN on the Web for a list of locations and telephone numbers

- ♦ International – **<http://www.aten.com>**
- ♦ North America – **<http://www.aten-usa.com>**

Chapter 1

Introduction

Overview

As part of its NRGence™ line, ATEN has developed a new generation of green energy power distribution units (PDUs) to effectively increase the efficiency of data center power usage. The NRGence™ PE5220s, PE5312sGL, PE5312sGR, and PE5340s are intelligent PDUs that contain 12/20/40 AC outlets and are available in IEC or NEMA input configurations. The basic characteristics of each model are shown in the tables on page 4.

The PE5220s, PE5312sGL, PE5312sGR, and PE5340s provide secure, centralized, intelligent, power management of data center IT equipment (servers, storage systems, KVM switches, network devices, serial data devices, etc.), as well as the ability to monitor the data center's environmental health via sensors*.

NRGence™ eco PDUs offer remote power control combined with real-time power measurement - allowing you to control and monitor the power status of devices attached to the PDUs, either at the PDU device or bank level, from practically any location via a TCP/IP connection.

The eco PDU also offers comprehensive power analysis reports which can separate departments and locations, providing precise measurements of current, voltage, power and watt-hour in a real-time display.

Installation and operation is fast and easy: plugging cables into their appropriate ports and user-friendly browser-based management is all that is entailed. Since the eco PDU firmware is upgradeable over the net, you can stay current with the latest improvements by simply downloading updates from our website as they become available.

NRGence™ eco PDUs support any 3rd party V1, V2, V3 SNMP Manager Software and NRGence™ eco Sensors software (eco PDU Manager Software). eco Sensors provide you with an easy method for managing multiple devices, offering an intuitive and user-friendly Graphical User Interface that allows you to configure a PDU device and monitor the power status of the equipment connected to it.

(Continues on next page.)

(Continued from previous page.)

With its advanced security features and ease of operation, the PE5220s, PE5312sGL, PE5312sGR, and PE5340s eco PDUs are the most convenient, most reliable, and most cost effective way to remotely manage power access for multiple computer installations and allocate power resources in the most efficient way possible.

-
- Note:** 1. Sensors are optional accessories. A sensor-enabled installation is required to generate more complete energy-efficient data readings and charts. Higher sensor installation density is helpful to generate more accurate data. See *Optional Accessories*, page 8, for further information.
2. eco PDUs are primarily designed for access via Intranet; extra network security protection is suggested for Internet access usage.
-

Comparison Charts

PE5220sA / PE5220sB / PE5220sA-AX-J / PE5220sB-AX-J / PE5220sG Comparison Chart

Model	Inlet / Cord	Outlets		Metering Level	Amps		
					Per Duplex Receptacle Outlet	Bank	Total
PE5220sA	NEMA 5-20P	20	NEMA 5-15R	Bank	12A (UL), 15A (Max). {Per outlet}	16A (UL), 20A (Max)	16A (UL), 20A (Max)
PE5220sB	NEMA 6-20P		IEC C13		12A (UL), 15A (Max)		
PE5220sA-AX-J	NEMA L5-20P		NEMA 5-15R		12A (UL), 15A (Max). {Per outlet}	16A (UL), 20A (Max)	16A (UL), 20A (Max)
PE5220sB-AX-J	NEMA L6-20P		IEC C13		12A (UL), 15A (Max)	16A (UL), 20A (Max)	16A (UL), 20A (Max)
PE5220sG	IEC 60320 C20		IEC C13		10A	15A (CB), 16A (Max)	15A (CB), 16A (Max)

PE5312sGL / PE5312sGR Comparison Chart

Model	Inlet / Cord	Outlets		Metering Level	Amps		
					Per Outlet	Bank	Total
PE5312sGL	IEC 60309 32A	12	Bank1: Outlet 1–6 ; 6 x UK BS1363 Bank2: Outlet 7 –12 ; 6 x UK BS1363	Bank	BS1363: 13A (Max)	16A (Max), TUV De-rated 15A (Max)	32A (Max), TUV De-rated 30A (Max)
PE5312sGR	IEC 60309 32A		Bank1: Outlet 1–6 ; 6 x UK BS1363 Bank2: Outlet 7 –12 ; 6 x UK BS1363		BS1363: 13A (Max)	16A (Max), TUV De-rated 15A (Max)	32A (Max), TUV De-rated 30A (Max)

PE5340sB / PE5340sG / PE5340sJ Comparison Chart

Model	Inlet / Cord	Outlets		Metering Level	Amps		
					Per Duplex Receptacle Outlet	Bank	Total
PE5340sB	NEMA L6-30P	40	Bank 1: Outlet 1–20: 20 x C13 Bank 2: Outlet 21–40: 20 x C13	Bank	12A (UL), 15A (Max)	12A (UL), 15A (Max)	24A (UL), 30A (Max)
PE5340sJ							
PE5340sG	IEC 60309 32A				10A	15A (TUV) 16A (Max)	30A (TUV) 32A (Max)

Note: The PE5340sJ is identical to the B model but has power cords designed for the Japanese market. For the complete specifications of individual models, please reference *Specifications*, page 72.

Features

Power Distribution

- ◆ Space saving 0U rack mount design with rear mounting
- ◆ IEC or NEMA outlet models
- ◆ 3 digit 7-segment front panel LED shows PDU/Phase / Bank / IP (PE5312sGL/PE5312sGR/PE5340s), or PDU Amp / IP (PE5220s)
- ◆ Remote users can monitor PDU / Bank status via web GUI from most internet browsers
- ◆ Safe shutdown support
- ◆ Separate power for the unit's own power and its power outlets. The user interface is still accessible even when an overload condition trips the devices' circuit breaker

Remote Access

- ◆ Remote power control via TCP/IP and a built in 10/100 Ethernet port
- ◆ Network Protocols: TCP/IP, UDP, HTTP, HTTPS, SSL, SMTP, DHCP, NTP, DNS, auto sense, Ping
- ◆ eco PDU Power Management software – eco Sensors
- ◆ Supports SNMP Manager V1, V2 & V3

Operation

- ◆ Supports multiple power control methods – Wake on LAN, System after AC Back, Kill the Power
- ◆ Power-on sequencing – users can set the power on sequence and delay time for each port to allow equipment to be turned on in the proper order
- ◆ Easy setup and operation via a browser-based user interface
- ◆ Multibrowser support (IE, Mozilla, Firefox, Chrome, Safari, Opera, Netscape)
- ◆ RTC support to keep the timer running during times of no power.
- ◆ Supports up to 8 user accounts and 1 administrator account; supports 2 concurrent logins

Management

- ◆ Power status measurement at the PDU/Bank level
- ◆ LED indicators for current and IP address at the PDU device and at the Bank (PE5340s only) level
- ◆ Real-time aggregate current, voltage, power, and power dissipation displayed in a browser-based UI for monitoring at the PDU and bank level.
- ◆ Environment monitoring – supports external temperature / humidity / differential pressure sensors for rack environment monitoring
- ◆ Current and voltage threshold setting
- ◆ Naming support for outlets
- ◆ User outlet access assignment on an outlet-by-outlet basis.
- ◆ Event logging and syslog support
- ◆ Upgradeable firmware
- ◆ Multilanguage support: English, Traditional Chinese, Simplified Chinese, Japanese, German, Italian, Spanish, French, Russian, Korean, Portuguese.

Security

- ◆ Two-level password security
- ◆ Strong security features include strong password protection and advanced encryption technologies – 128 bit SSL
- ◆ Remote authentication support: RADIUS

eco Sensors Energy Management Software*

- ◆ Automatic discovery of all PE devices within the same intranet
- ◆ Remote real-time power measurement and monitoring
- ◆ Real-time environment sensor monitoring
- ◆ Plotting/monitoring of all PE devices
- ◆ Exceed threshold alert through SMTP and System log
- ◆ Power Analysis report

Note: eco Senors is designed to work with NRGence™ PDUs, and is bundled with all PE series packages.

Requirements

- ♦ Browsers accessing the eco PDU unit must support SSL 128 bit encryption.
- ♦ For cold booting of attached computers, the computer's BIOS must support *Wake on LAN* or *System after AC Back*.
- ♦ For Safe Shutdown:
 - ♦ The computer must be running Windows (Windows 2000 or higher) or Linux.
 - ♦ The *Safe Shutdown* program (available by download from our website or on the software CD included), must be installed and running on the computer.

Optional Accessories

Sensors

Sensors are optional accessories. You can use the eco PDU unit without sensors. However, if you want to have complete energy management of an instrumented data center with the use of the eco PDU, you would need to use eco Sensors software and install 4 sensors for each of the racks to generate a complete energy-efficient data reading and chart. Higher sensor installation density is helpful to generate more accurate data. 16/20/24-port models have 2 sensor ports. In this case, Sensor 1 needs to be installed at the intake of the rack and sensor 2 needs to be placed at the exhaust of IT equipment of the rack. A sensor-enabled installation is required to generate a more complete energy-efficient data reading and chart. Higher sensor installation density is helpful to generate more accurate data. Available sensors are show in the table, below:

Sensor	Part Number
Temperature	EA1140
Temperature / Humidity	EA1240
Differential Pressure / Temperature	EA1340

Sensor Management

Sensors can be managed via the eco PDU's built-in graphical user interface (GUI) or with the NRGence™ eco Sensors software that can be downloaded from the ATEN website. The download link can be found on the software CD provided with the eco PDU package.


Cable Holders

Cable holders are optional accessories. For added safety, use ATEN Lok-U-Plug cable holders to secure the cables from your attached devices in place on the eco PDU unit. Use only the ATEN Lok-U-Plug cable holders that have been specifically designed to work with the eco PDU. Using any other kind of cable securing device could be highly dangerous.

Part Number	Description
2X-EA07	Lok-U-Plug Cable Holder (10 pcs)
2X-EA08	Lok-U-Plug Installation Tool (4 pcs)


Components

PE5220sB-AX-J / PE5220sB / PE5220sG Front View

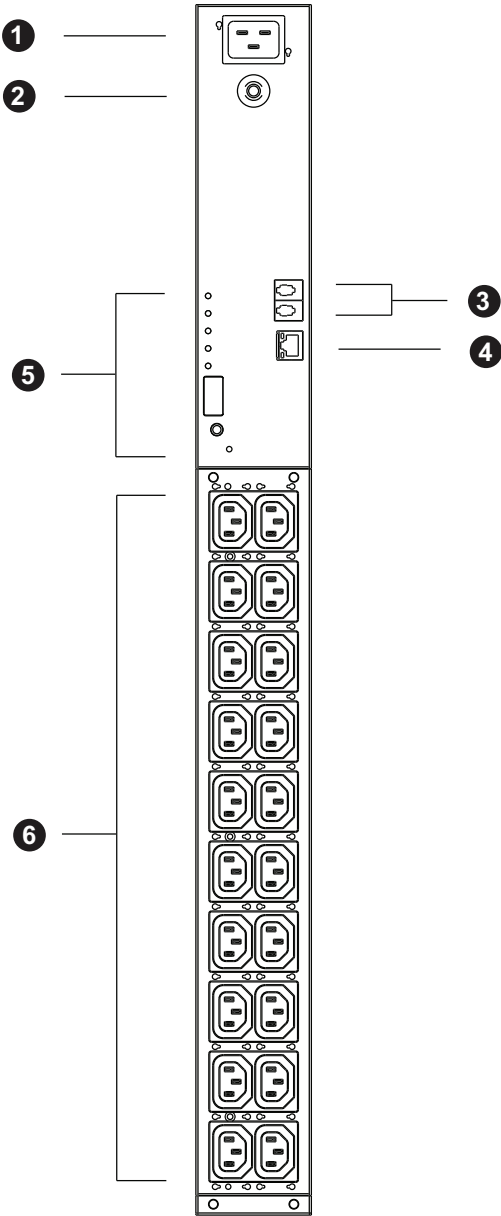

No.	Item	Description
1	Power Inlet	The power cord that connects the unit to an AC power source plugs into this NEMA L6-20R socket (PE5220sB-AX-J); NEMA 6-20R socket (PE5220sB); or IEC 60320 C19 socket (PE5220sG).
2	Circuit Breaker Pushbutton	As a safety measure, if there is an over-current situation regarding the device's power, the circuit breakers will trip. Press the button to recover normal operation.
3	Sensor Ports	External sensors plug into these two RJ-11 ports.
4	LAN Port and LEDs	<p>The cable that connects the eco PDU to the LAN plugs in here. The Link and LAN LEDs are built into the LAN port:</p> <p>Link: Lights GREEN to indicate that a connection via the eco PDU's RJ-45 Ethernet port has been established. Flashes to indicate data is being transmitted.</p> <p>LAN: Lights ORANGE to indicate 10 Mbps data transmission speed. The LED lights GREEN to indicate 100 Mbps data transmission speed.</p>
5	Readout Section, LEDs and Reset Switch	Details of this section are provided on page 19.
6	Power Outlets	20 x IEC 60320 C13


Note: Holes for ATEN Lok-U-Plug cable holders are located around the outlets. See *Securing the Cables*, page 25, for further information.

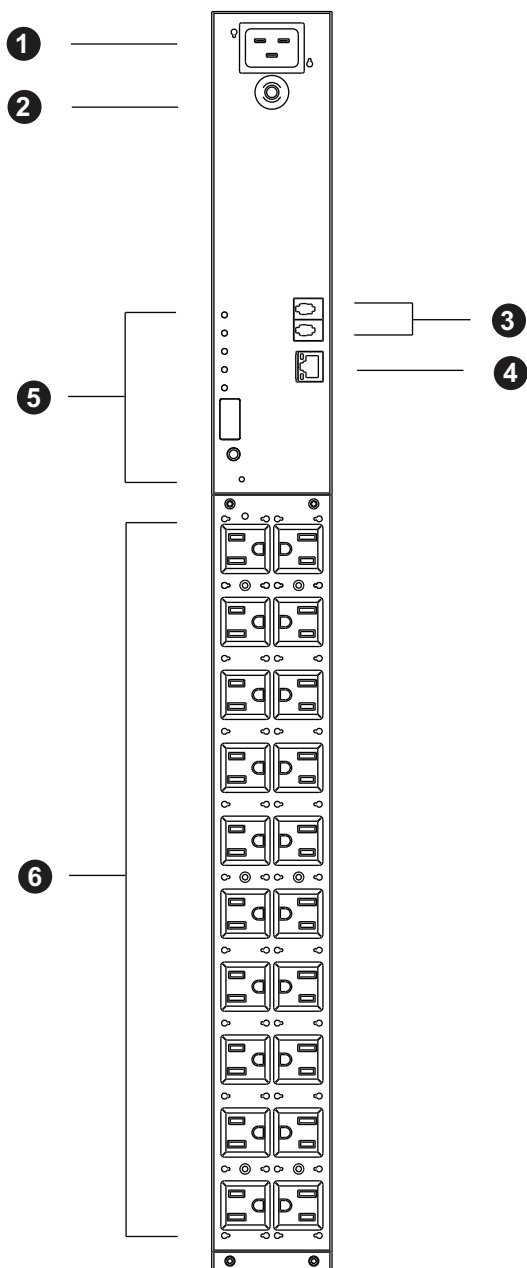PE5220sA-AX-J / PE5220sA Front View

No.	Item	Description
1	Power Inlet	The power cord that connects the unit to an AC power source plugs into this NEMA L5-20R socket (PE5220sA-AX-J); NEMA 5-20R socket (PE5220sA).
2	Circuit Breaker Pushbutton	As a safety measure, if there is an over-current situation regarding the device's power, the circuit breakers will trip. Press the button to recover normal operation.
3	Sensor Ports	External sensors plug into these two RJ-11 ports.
4	LAN Port and LEDs	<p>The cable that connects the eco PDU to the LAN plugs in here. The Link and LAN LEDs are built into the LAN port:</p> <p>Link: Lights GREEN to indicate that a connection via the eco PDU's RJ-45 Ethernet port has been established. Flashes to indicate data is being transmitted.</p> <p>LAN: Lights ORANGE to indicate 10 Mbps data transmission speed. The LED lights GREEN to indicate 100 Mbps data transmission speed.</p>
5	Readout Section, LEDs and Reset Switch	Details of this section are provided on page 19.
6	Power Outlets	20 x NEMA 5-15R

Note: Holes for ATEN Lok-U-Plug cable holders are located around the outlets. See *Securing the Cables*, page 25, for further information.


PE5312sGL Front View

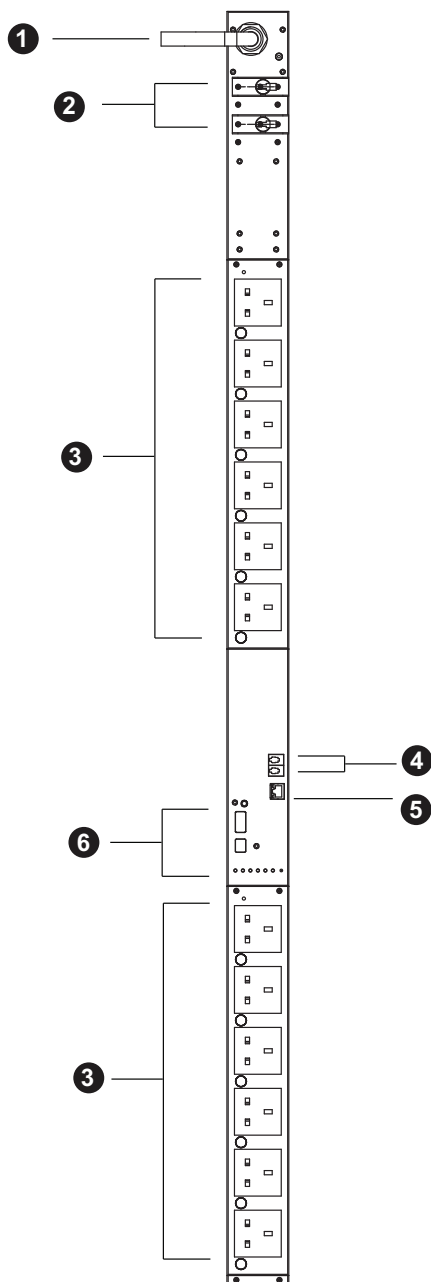

No.	Item	Description
1	Power Connection	The power cord that connects the unit to an AC power source plugs into an IEC 60309 32A power supply.
2	Circuit Breakers	As a safety measure, if there is an overcurrent situation regarding the device's power, the circuit breakers will trip.
3	Power Outlets*	Bank1 : Outlet 1–6; 6 x UK BS1363 (90 Degree) Bank2 : Outlet 7–12; 6 x UK BS1363 (90 Degree)
4	Sensor Ports	External sensors plug into these two RJ-11 ports.
5	LAN Port and LEDs	The cable that connects the eco PDU to the LAN plugs in here. The Link and LAN LEDs are built into the LAN port: Link: Lights GREEN to indicate that a connection via the eco PDU's RJ-45 Ethernet port has been established. Flashes to indicate data is being transmitted. LAN: Lights ORANGE to indicate 10 Mbps data transmission speed. The LED lights GREEN to indicate 100 Mbps data transmission speed.
6	Readout Section, LEDs and Reset Switch	Details of this section are provided on page 20.

Note: Holes for ATEN Lok-U-Plug cable holders are located around the outlets. See *Securing the Cables*, page 25, for further information.


PE5312sGR Front View

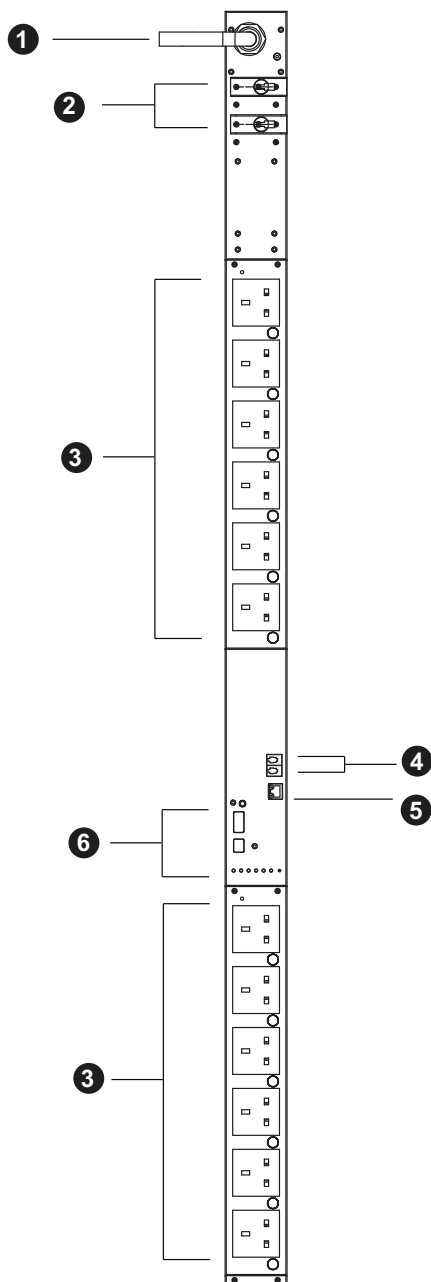

No.	Item	Description
1	Power Connection	The power cord that connects the unit to an AC power source plugs into an IEC 60309 32A power supply.
2	Circuit Breakers	As a safety measure, if there is an overcurrent situation regarding the device's power, the circuit breakers will trip.
3	Power Outlets*	Bank1 : Outlet 1–6; 6 x UK BS1363 (270 Degree) Bank2 : Outlet 7–12; 6 x UK BS1363 (270 Degree)
4	Sensor Ports	External sensors plug into these two RJ-11 ports.
5	LAN Port and LEDs	The cable that connects the eco PDU to the LAN plugs in here. The Link and LAN LEDs are built into the LAN port: Link: Lights GREEN to indicate that a connection via the eco PDU's RJ-45 Ethernet port has been established. Flashes to indicate data is being transmitted. LAN: Lights ORANGE to indicate 10 Mbps data transmission speed. The LED lights GREEN to indicate 100 Mbps data transmission speed.
6	Readout Section, LEDs and Reset Switch	Details of this section are provided on page 20.

Note: Holes for ATEN Lok-U-Plug cable holders are located around the outlets. See *Securing the Cables*, page 25, for further information.


PE5340s Front View

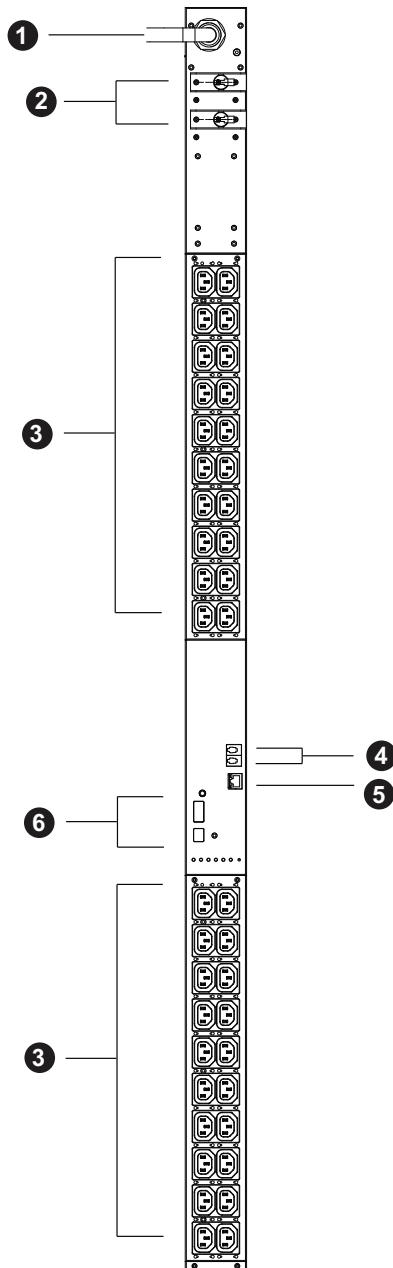

No.	Item	Description
1	Power Connection	The power cord that connects the unit to an AC power source plugs into this NEMA L6-30P socket (B and J models); or into an IEC 60309 32A power supply (G model).
2	Circuit Breakers	As a safety measure, if there is an overcurrent situation regarding the device's power, the circuit breakers will trip.
3	Power Outlets*	20 x IEC 320 C13 20 x IEC 320 C13
4	Sensor Ports	External sensors plug into these two RJ-11 ports.
5	LAN Port and LEDs	The cable that connects the eco PDU to the LAN plugs in here. The Link and LAN LEDs are built into the LAN port: Link: Lights GREEN to indicate that a connection via the eco PDU's RJ-45 Ethernet port has been established. Flashes to indicate data is being transmitted. LAN: Lights ORANGE to indicate 10 Mbps data transmission speed. The LED lights GREEN to indicate 100 Mbps data transmission speed.
6	Readout Section, LEDs and Reset Switch	Details of this section are provided on page 20.


Note: Holes for ATEN Lok-U-Plug cable holders are located around the outlets. See *Securing the Cables*, page 25, for further information.

PE5220s Readout Section

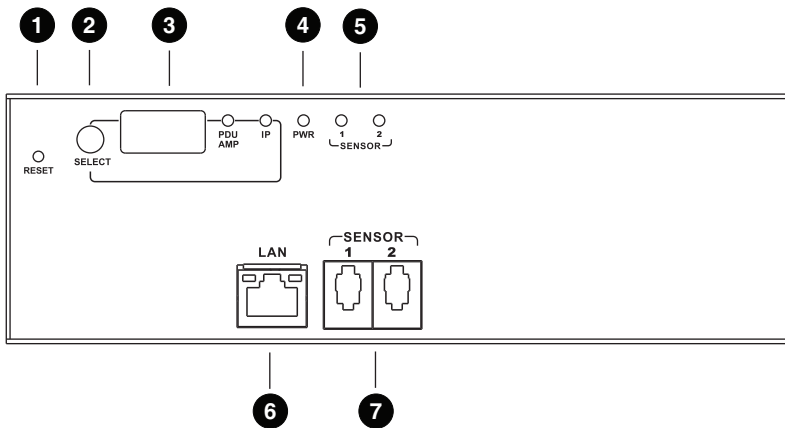

No.	Item	Description
1	Reset Switch	<p>This switch is semi-recessed and must be pushed with a thin object, such as the end of a paper clip.</p> <ul style="list-style-type: none"> ◆ Press and release to reboot the device. ◆ Press and hold for more that three seconds to reset the eco PDU to its factory default settings
2	Selection Pushbutton	<p>Press this button to cycle the selection through the items (PDU AMP, IP); the LEDs next to the items indicate which one the displays relate to.</p>
3	Readout Section	<ul style="list-style-type: none"> ◆ When PDU Amp or IP is selected, readouts for Current and IP appear in the display. ◆ Press the button next to the LED display window to cycle the selection between the items.
4	Status LED	<p>Power: Lights when the unit is powered on and ready to operate.</p>
5	Sensor LED	<p>When a sensor is plugged in, the sensor LED lights up.</p>
6	LAN Port	<p>The cable that connects the unit to the Internet, LAN, or WAN plugs in here.</p>
7	Sensor Ports	<p>External sensors plug into these two RJ-11 ports. See <i>Optional Accessories</i>, page 8, and <i>Securing the Sensors</i>, page 26.</p>

PE5312s / PE5340s Readout Section

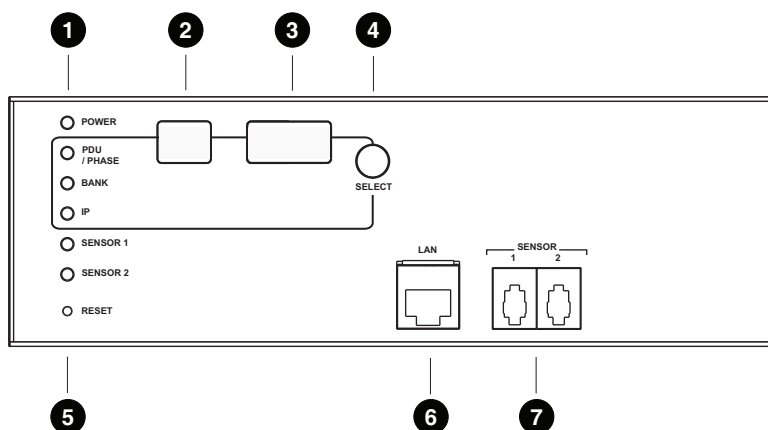

No.	Item	Description
1	Status LEDs	Power: Lights when the unit is powered on and ready to operate.
2	ID Section	<ul style="list-style-type: none"> ◆ The ID of the selected PDU/Phase / Bank / IP appears in the LED display window. ◆ When the PDU/Phase LED is lit, use the Selection button to cycle through the items. ◆ When the Bank LED is lit, use the Selection button to toggle between Bank 1 and Bank 2
3	Readout Section	<ul style="list-style-type: none"> ◆ When PDU/Phase / Bank / IP is selected, readouts for Current and IP appear in the display. ◆ Press the button next to the LED display window to cycle the selection between the items. ◆ When a sensor is plugged in, the sensor LED lights up.
4	Selection Pushbutton	Press this button to cycle the selection through the items; the LEDs next to the items indicate which one the displays relate to.
5	Reset Switch	<p>This switch is semi-recessed and must be pushed with a thin object, such as the end of a paper clip.</p> <ul style="list-style-type: none"> ◆ Press and release to reboot the device. ◆ Press and hold for more than three seconds to reset the eco PDU to its factory default settings
6	LAN Port	The cable that connects the unit to the Internet, LAN, or WAN plugs in here.
7	Sensor Ports	External sensors plug into these two RJ-11 ports. See <i>Optional Accessories</i> , page 8, and <i>Securing the Sensors</i> , page 26.

Chapter 2

Hardware Setup

Before You Begin




1. Important safety information regarding the placement of this device is provided on page 61. Please review it before proceeding.
2. Make sure that power to all the devices you will be connecting have been turned off. You must unplug the power cords of any computers that have the Keyboard Power On function.



1. Vous trouverez des informations de sécurité importantes concernant le positionnement de l'unité à la page 61. Veuillez les lire attentivement avant d'aller plus loin.
2. Vérifiez que tous les périphériques à connecter sont éteints. Vous devez débrancher les câbles d'alimentation des ordinateurs disposant de la fonction de mise sous tension à partir du clavier.

Rack Mounting



The eco PDU can be mounted in a 0U configuration on the side of a rack. To rack mount the device, use the rack mounting brackets that came with your device. The brackets can be mounted either near the top and bottom of the back panel, or the top and bottom ends of the device, as shown in the diagram below:

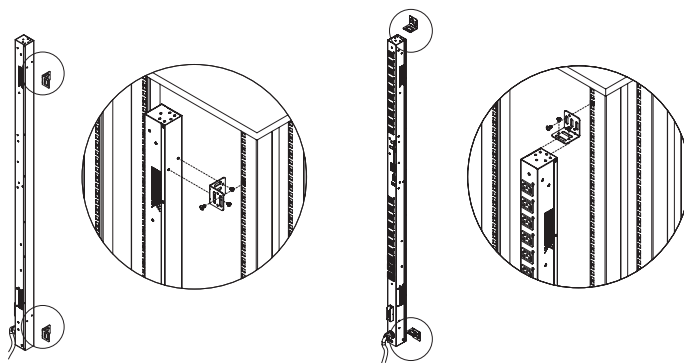

Note: The eco PDU model shown in the diagram is for reference only.

PDU Placement

For safety reasons the eco PDU should not be installed with the power sockets facing directly up or down, and thus should only be installed with the power sockets facing out from a vertical position as shown below:

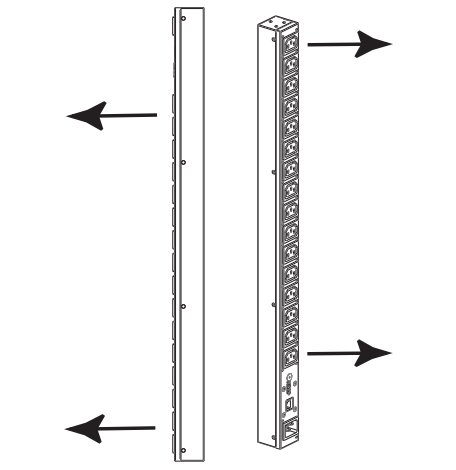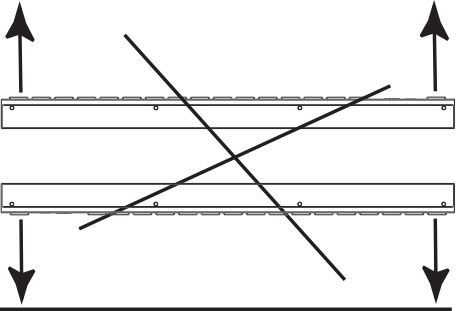 <p>Floor</p>	<p>Right.</p>
 <p>Floor</p>	<p>Wrong</p>

Installation

To set up your eco PDU installation, refer to the installation diagram on the next page (the numbers in the diagram correspond to the numbered steps), and do the following:

1. For each device you want to connect, use its power cable to connect from the device's AC socket to any available outlet on the eco PDU. Use ATEN Lok-U-Plug cable holders to secure them.

Note: See *Securing the Cables*, page 25, for details.

2. Plug the cable that connects the eco PDU to the LAN into the eco PDU's LAN port.
3. If you are using sensors in your eco PDU installation, connect them to the sensor ports on the unit's front panel.



Note: Sensors are optional. Please see *Optional Accessories*, page 8, and the detailed sensor installation diagrams later in this chapter for further information.

4. Connect the eco PDU's power cord to an AC power source.

Note: We strongly advise that you do not plug the eco PDU into a multi socket extension cord, since it may not receive enough amperage to operate correctly.


Once you have finished these installation steps, you can turn on the eco PDU and the connected devices.

Note: We strongly recommend using cable ties and cable bars to safely and securely route the cables attached to the front of the unit.

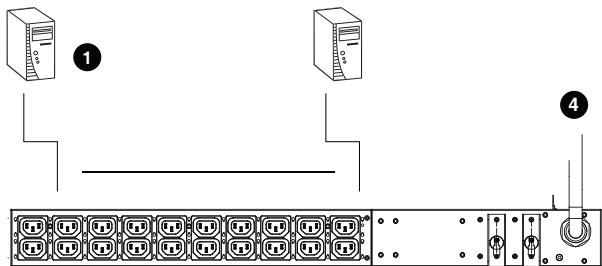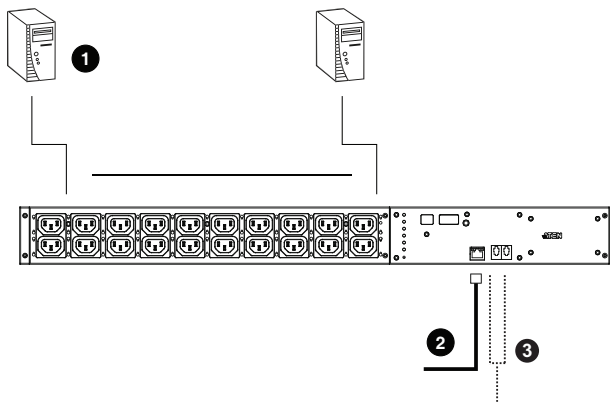

Securing the Cables


For added safety, use ATEN Lok-U-Plug cable holders to secure the cables from your attached devices in place on the eco PDU unit. Secure the cable holders using the specially designed holes around the individual power outlets, as shown below:

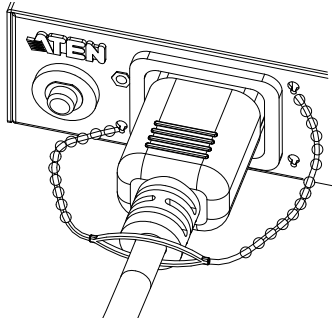

-
- Note:** 1. Cable holders are an optional accessory. See *Cable Holders*, page 8.
2. Use only the ATEN Lok-U-Plug cable holders that have been specifically designed to work with the eco PDU. Using any other kind of cable securing device could be highly dangerous.
-

Securing the Sensors

Connect the sensors to the eco PDU's front panel sensor ports and secure them using sensor mounts, tie wraps, and adhesive cable tie holders. If you use a tie wrap to secure the sensor, tighten the tie wrap over the recessed channel on the sensor, as shown in the following diagram:

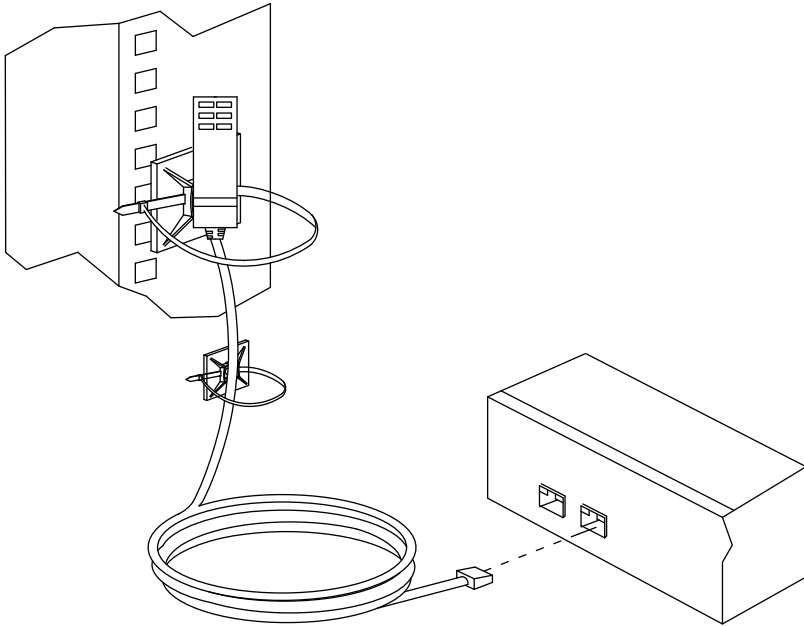

-
- Note:**
1. The sensors shown in the above diagram are for reference purposes only. The sensors for the eco PDU may look slightly different.
 2. Depending on the model and type of sensor, sensor mounts, tie wraps, and adhesive cable tie holders may or may not be provided in the package.
-

Chapter 3

Basic Operation and First Time Setup

Operation Methods

NRGence™ eco PDU models provide three methods to access and manage your installation: Browser, eco Sensors (eco PDU Management Software), and SNMP.

Note: The following sections of this chapter contain information concerning Browser operation. For eco Sensors operation, please reference the separate eco Sensors User Manual. The eco Sensors software and User Manual can be downloaded from the ATEN website.

Browser

NRGence™ PDUs can be accessed and controlled via any supported Internet browser from any platform. See *First Time Setup*, page 28, and the following sections in this chapter, for full details.

eco Sensors

All eco PDUs support eco Sensors (eco PDU Manager Software). NRGence™ eco Sensors provides you with an easy method for managing multiple devices, offering an intuitive and user-friendly Graphical User Interface that allows you to configure a PDU device and monitor power status of the equipment connected to it. NRGence™ eco Sensors software can be downloaded from the ATEN website, along with a separate eco Sensors User Manual.

SNMP

NRGence™ eco PDUs support any 3rd party V1, V2, V3 SNMP Manager Software. SNMP Management Information Database (MIB) files for the eco PDU device can be found on the software CD provided with the eco PDU package.

First Time Setup

Once the eco PDU installation has been cabled up, the next task the Administrator needs to perform involves configuring the network parameters, changing the default Super Administrator login settings, and adding users.

The easiest way to accomplish this is to login over the network with a browser.

- Note:** 1. Since this is the first time you are logging in, use the default Username: *administrator*; and the default Password: *password*. For security purposes we recommend changing them to something unique (see *Changing the Administrator Login*, page 30).
2. For remote methods of getting logged in to the network, see *IP Address Determination*, page 70.

After you successfully login, the eco PDU Energy/Connections page appears:

NRGence
PE5340SG

Energy

User

Log

Setup

PDU

ATEN

Connections | Configuration

Help

Logout

PE5340SG

PDU Status

PDU Name	Measurement		Min Threshold	Max Threshold
PE5340SG	Aggregate current	0.10 A		
	Voltage	134.30 V		
	Power	0.0000 W		
	Aggregate power dissipation	0.0000 KWH		
	Voltage frequency	59.77 HZ		
	Power factor	0.00		
	Sensor 1			
Sensor 1	Temperature	N/A		
	Humidity	N/A		
	Pressure	N/A		
	Temperature	N/A		
	Humidity	N/A		
Sensor 2	Pressure	N/A		

Bank Status

Bank	Bank Name	Measurement		Min Threshold	Max Threshold
[01]		Current	0.06 A		
		Voltage	134.30 V		
		Power	0.0000 W		
		Power Dissipation	0.0000 KWH		
		Breaker	ON		
		Power factor	0.00		
		Current	0.04 A		

Note: Operation details are discussed in *Outlet Access*, page 34, in the next chapter. For further setup information, continue with this chapter

Network Configuration

To set up the network, do the following:

1. Click the **Setup** tab.
2. The interface displays the **Device Configuration** page. A screen similar to the one below appears:

NRG Office
PE5340sG

Energy User Log **Setup** PDU

Device Configuration | Security Help Logout

PE5340sG

(01) (02) (03) (04) (05) (06) (07) (08) (09) (10) (11) (12) (13) (14) (15) (16) (17) (18) (19) (20) (21) (22) (23) (24) (25) (26) (27) (28) (29)

General

PDU Name: PE5340sG

MAC Address: 00:10:74:A1:00:00

Firmware Version: FW Ver: 1.0.062

Rack Location name: PE5340sG

Service Ports

☒ Only HTTPs ☐ HTTP / HTTPs

HTTP: 80

HTTPs: 443

IPv4 Configuration

☒ Obtain IP address automatically [DHCP]

☐ Set IP address manually [Fixed IP]

IP Address: 10.0.0.200

Subnet Mask: 255.255.255.0

Default Gateway: 10.0.0.254

© Copyright 2012 ATEN © International Co., Ltd.

3. Fill in the fields according to the information provided under *Device Configuration*, page 41.

Changing the Administrator Login

To change the default Administrator username and password, do the following:

1. Click the **User** tab.

The User page has a detailed list of users – with more information about each – in the large central panel:

Administrator Information

Name: administrator Password: *****

SNMPv3 account information

Name: administrator Auth-password: ***** Priv-Password: *****

SNMPv1/v2c community

Read community: administrator Write community: administrator

User Information

Management	Name	Password
Enable	test01	*****
Disable		
Disable		
Disable		
Disable		
Disable		
Disable		
Disable		

Save

2. In the **Administrator Information** section, reset the name and password fields to something unique, then click **Save** (at the bottom of the page.)

Note: If you forget the Administrator’s name or password, short the mainboard jumper to restore the default Administrator account. See *Administrator Login Failure*, page 79 for details.

Moving On

After setting up the network and changing the default Administrator username and password, you can proceed to other administration activities – including adding users, which is covered in the next chapter.

Chapter 4

Browser Operation

Logging In

The eco PDU can be accessed via Internet browser from any OS platform.


Note: Browsers must support SSL 128 bit encryption.

To access the eco PDU do the following:

1. Open your browser and specify the IP address of the eco PDU you want to access in the browser's URL location bar.

Note: You can get the IP address from the eco PDU administrator, or see *IP Address Determination*, page 70, for information about setting it up yourself.

2. If a Security Alert dialog box appears, accept the certificate – it can be trusted. The Login page appears:

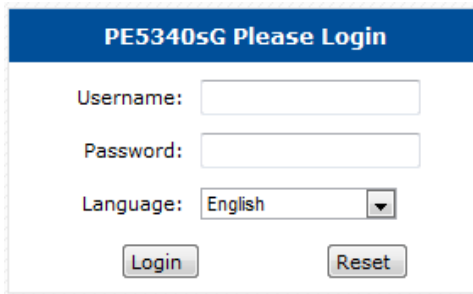

PE5340sG Please Login

Username:


Password:

Language: ▼

3. Provide a valid Username and Password (set by the eco PDU administrator), and select your language. (Options are: English [default]; Traditional Chinese; Simplified Chinese; Japanese; German; Italian; Spanish; French, Russian, Korean, Portuguese).
4. Click **Login** to bring up the Main Page.

The eco PDU Main Page

After you have successfully logged in, the eco PDU Main Page comes up with the Energy *Connections* page displayed:

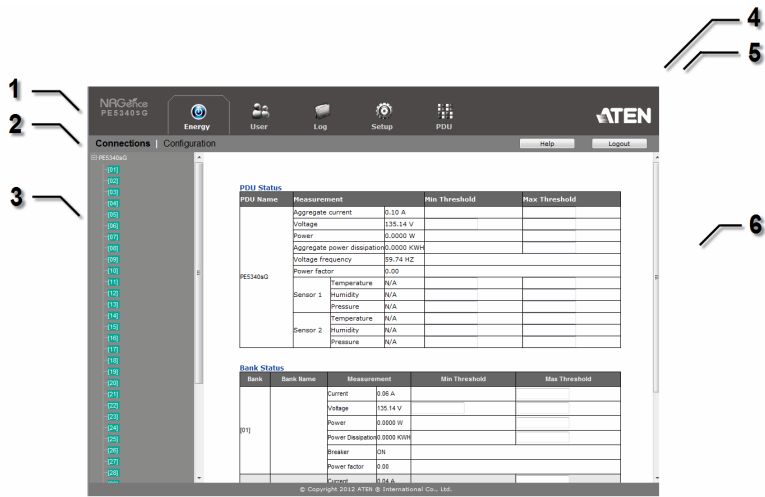

Note: The screen depicts an Administrator’s page. Depending on a user’s type and permissions, and your PE model, not all of these elements appear.

Page Components

The web page components are described in the table below:

No.	Item	Description
1	Tab Bar	The tab bar contains the eco PDU’s main operation categories. The items that appear in the tab bar are determined by the user’s type, and the authorization options that were selected when the user’s account was created.
2	Menu Bar	The menu bar contains operational sub-categories that pertain to the item selected in the tab bar. The items that appear in the menu bar are determined by the user’s type, and the authorization options that were selected when the user’s account was created.
3	Sidebar	The Sidebar provides a tree view listing of outlets that relate to the various tab bar and menu bar selections.

No.	Item	Description
4	Help	Connects to on-line help at the ATEN website for the device's configuration and operation.
5	Logout	Click this button to log out of your eco PDU session.
6	Interactive Display Panel	This is your main work area. The screens that appear reflect your menu choices and Sidebar node selection.

Outlet Access

Connections

When you login to the eco PDU, the interface opens on the *Energy* tab; and the *Connections* menu. The contents of the **PDU Status** and **Bank Status** sections are displayed in the main panel.

Navigation icons: Energy, User, Log, Setup, PDU

Help, Logout

Connections | Configuration

PE5340sG

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

PDU Status

PDU Name	Measurement		Min Threshold	Max Threshold	
PE5340sG	Aggregate current	0.10 A			
	Voltage	134.30 V			
	Power	0.0000 W			
	Aggregate power dissipation	0.0000 KWH			
	Voltage frequency	59.77 HZ			
	Power factor	0.00			
	Sensor 1	Temperature	N/A		
		Humidity	N/A		
		Pressure	N/A		
	Sensor 2	Temperature	N/A		
Humidity		N/A			
Pressure		N/A			

Bank Status

Bank	Bank Name	Measurement	Min Threshold	Max Threshold
011		Current	0.06 A	
		Voltage	134.30 V	
		Power	0.0000 W	
		Power Dissipation	0.0000 KWH	
		Breaker	ON	
		Power factor	0.00	
		Current	0.04 A	

© Copyright 2012 ATEN @ International Co., Ltd.

PDU Status

All eco PDU models support PDU device level monitoring. The **PDU Status** section allows you to set up a power management configuration for the PDU device as a whole:

PDU Status

PDU Name	Measurement		Min Threshold		Max Threshold	
PES340sG	Aggregate current	0.10 A				
	Voltage	135.67 V				
	Power	0.0000 W				
	Aggregate power dissipation	0.0000 KWH				
	Voltage frequency	59.74 HZ				
	Power factor	0.00				
	Sensor 1	Temperature	N/A			
		Humidity	N/A			
		Pressure	N/A			
	Sensor 2	Temperature	N/A			
		Humidity	N/A			
		Pressure	N/A			

■ PDU Threshold Settings

These fields are used to set the maximum and minimum threshold settings for Aggregate Current, Voltage, Power, and Aggregate Power Dissipation. If a range falls below the minimum setting, or exceeds the maximum setting an alarm is triggered.

- ♦ **Voltage Frequency** is displayed here in Hz.
- ♦ **Power Factor** displays a ratio between real and virtual power, providing a power performance value based on external power sources (i.e. not related to the eco PDU device).
- ♦ **Sensor 1 / Sensor 2**

If you have sensors installed in your installation, use these fields to set the maximum, minimum, and fluctuation threshold settings for Temperature, Humidity, and Pressure.

Note: Sensors are optional accessories. Check with your dealer for information about NRGence™ eco Sensors software.

Bank Status

All PE5340s and PE5220s eco PDU models support bank level monitoring. The **Bank Status** section allows you to set up separate power management configurations for the banks:

Bank Status

Bank	Bank Name	Measurement		Min Threshold	Max Threshold
[01]		Current	0.06 A		
		Voltage	134.26 V		
		Power	0.0000 W		
		Power Dissipation	0.0000 KWH		
		Breaker	ON		
		Power factor	0.00		
[02]		Current	0.04 A		
		Voltage	134.26 V		
		Power	0.0000 W		
		Power Dissipation	0.0000 KWH		
		Breaker	ON		
		Power factor	0.00		

Bank Threshold Settings

These fields are used to set the maximum and minimum threshold settings for Current, Voltage, Power, and Power Dissipation. If a range falls below the minimum setting, or exceeds the maximum setting an alarm is triggered.

- ◆ **Breaker** status (ON / OFF) displays here.
- ◆ **Power Factor** displays a ratio between real and virtual power, providing a power performance value based on external power sources (i.e. not related to the eco PDU device).

Configuration

The *Configuration* page is used to give a distinctive name to all the banks and outlets:

Bank Configuration

Bank	Bank Name	
[01]	Techdoc Servers	
[02]		

Outlet Configuration

Outlet	Outlet Name	
[01]		
[02]		
[03]		
[04]		
[05]		
[06]		
[07]		
[08]		
[09]		

- Click inside the field to input a name for a bank or outlet. The maximum number of characters is 15; input only alphanumeric characters, [Space] and [Underscore].
- Click **Save**, located at the bottom right of the page, to save the names.

User

When you select the *User* tab the screen comes up with *Administrator Information* and *User Information* displayed in the main panel. The eco PDU supports one Administrator account and up to eight User accounts.

- Note:**
- 1. Each account can support 2 login sessions
 - 2. The eco PDU supports a total of 3 concurrent login sessions.

Administrator information

Name: administrator

Password:

SNMPv3 account information

Name: administrator

Auth-password:

Priv-Password:

SNMPv1/v2c community

Read community: administrator

Write community: administrator

User information

Management	Name	Password
Enable	test01
Disable		
Disable		
Disable		
Disable		
Disable		
Disable		
Disable		

Save

Administrator Information

This section is used to set the Administrator name and password. Only Administrators can view this section. For details, see *Changing the Administrator Login*, page 30.

SNMPv3 Account Information

- Enter values for **Name**, **Auth-Password** and **Priv-Password** for SNMPv3 authentication, if required.

SNMPv1/V2c Community

- Enter values **Read community** and **Write community** for SNMPv1/V2c authentication, if required.
- Click **Save** to save the information

User Information

Use this section to add, enable, disable, or edit user accounts.

User information

Management	Name	Password
Enable ▾	test01	*****
Disable ▾		
Disable ▾		
Disable ▾		
Disable ▾		
Disable ▾		
Disable ▾		
Disable ▾		
Disable ▾		

Save

To add a user, do the following:

1. Set the Management field to *Enable*.
2. Key in a name and password in the Name and Password fields.
3. Click **Save** to save your settings.

Note: Values must be entered in both the Name and Password fields in order to enable an account.

The various options are explained in the following table:

Field	Description
Management	<p>The Management field allows you to Enable or Disable a user's account:</p> <ul style="list-style-type: none"> ◆ Enable – stores the user account ◆ Disable – disables the user account
Name	From 1 to 16 characters are allowed depending on the Account Policy settings. See <i>Account Policy</i> , page 50.
Password	From 1 to 16 characters are allowed depending on the Account Policy settings. See <i>Account Policy</i> , page 50.
Save	Click this button to save your operation or changes

Log

The eco PDU keeps a record of transactions that take place on the installation, and stores up to 128 events at one time.

The System Log Event List

- ♦ Clicking on a device in the Sidebar displays its log events in the main panel's log event list.
- ♦ Clicking the **Refresh** button brings the log list up to date with the latest events.
- ♦ The entry box to the right of the Refresh button lets you set the number of events to display per page. Simply key in the number of your choice.
- ♦ The top right of the main panel shows the total number of pages in the log file, and what page you are currently viewing.
- ♦ The buttons on the bottom row function as follows:
 - ♦ **Clear** – click to erase the contents of the log event list
 - ♦ **First Page** – click to go to the first page of the log event list
 - ♦ **Previous Page** – click to move to the previous page of the log event list
 - ♦ **Next Page** – click to move to the next page of the log event list
 - ♦ **Last Page** – click to move to the last page of the log event list
 - ♦ **Export Log** – click to save the contents of the log event list to file.

Setup

The *Setup* page allows administrators and users with device management permission to configure and control overall eco PDU operations.

Device Configuration

This page presents information about the selected device, as described in the following sections:

General

General

PDU Name:

MAC Address: 00:10:74:A1:00:00

Firmware Version: F/W Ver:1.0.062

Rack Location name:

Item	Meaning
PDU Name	This field lets you give the device a unique name. Simply delete whatever is in the text box and key in the name of your choice. Click Save (located at the bottom of the page) to save the new name.
MAC Address	This item displays the eco PDU's MAC address.
Firmware Version	This item displays the current firmware version number. You can reference it to see if there are newer versions available on the ATEN website.
Rack Location Name	This field lets you give the rack location a unique name for easy reference.

Service Ports

As a security measure, if a firewall is being used, the Administrator can specify the port numbers that the firewall will allow. If a port other than the default is used, users must specify the port number as part of the IP address when they login. If an invalid port number (or no port number) is specified, the eco PDU will not be found.

Select whether to allow only secure browser logins, or both HTTP and HTTPs, as show below:

Service Ports

☒ Only HTTPs ☐ HTTP / HTTPs

HTTP:

HTTPS:

An explanation of the fields is given in the table below:

Field	Explanation
HTTP	The port number for a browser login. The default is 80.
HTTPS	The port number for a secure browser login. The default is 443.

-
- Note:** 1. Valid entries for all of the Service Ports are from 1–65535.
2. The service ports cannot have the same value. You must set a different value for each one.
 3. If there is no firewall (on an Intranet, for example), it doesn't matter what these numbers are set to, since they have no effect.
-

IPv4 Configuration

The PDU's IPv4 IP and DNS addresses (the traditional method of specifying IP addresses) can either be assigned dynamically (DHCP), or a fixed IP address can be specified.

The screenshot shows the 'IPv4 Configuration' window. It has two main sections. The first section is for IP address configuration, with 'Obtain IP address automatically [DHCP]' selected (indicated by a green dot) and 'Set IP address manually [Fixed IP]' unselected (indicated by a blue dot). Below these are three input fields: 'IP Address' with the value '10.3.41.60', 'Subnet Mask' with '255.255.255.0', and 'Default Gateway' with '10.3.41.254'. The second section is for DNS server configuration, with 'Obtain DNS server address automatically' selected (green dot) and 'Set DNS server address manually' unselected (blue dot). Below these are two input fields: 'Preferred DNS Server' with '10.0.1.6' and 'Alternate DNS Server' with '0.0.0.0'.

- ♦ For dynamic IP address assignment, select the *Obtain IP address automatically* radio button. (This is the default setting.)
- ♦ To specify a fixed IP address, select the *Set IP address manually* radio button and fill in the IP address with values appropriate for your network.
- ♦ For automatic DNS Server address assignment, select the *Obtain DNS Server address automatically* radio button.
- ♦ To specify the DNS Server address manually, select the *Set DNS server address manually* radio button, and fill in the addresses for the Preferred and Alternate DNS servers with values appropriate for your network.

-
- Note:**
1. If you choose *Obtain IP address automatically*, when the device starts up it waits to get its IP address from the DHCP server. If it hasn't obtained the address after one minute, it automatically reverts to its factory default IP address (192.168.0.60.)
 2. If the device is on a network that uses DHCP to assign network addresses, and you need to ascertain its IP address, see *IP Address Determination*, page 70, for information.
 3. Specifying the Alternate DNS Server address is optional.
-

Event Notification

The Event Notification section is divided into three sections: SMTP Settings; SNMP Trap Receivers; and Syslog Server. Each section is described below.

♦ SMTP Settings

Event Notification

SMTP Server

☐ Enable report from the following SMTP Server

SMTP Server :

☐ My server requires authentication

Account Name :

Password :

From :

To :

To have the eco PDU device email reports from the SMTP server to you, do the following:

1. Enable the *Enable report from the following SMTP server*, and key in the IP address of your SMTP server.
2. If your server requires authentication, put a check in the *My server requires authentication* checkbox.
3. Key in the appropriate account information in the *Account Name*, *Password*, and *From* fields.

Note: Only one email address is allowed in the *From* fields, and it cannot exceed 64 characters.)

4. Key in the email address (addresses) of where you want the event reports sent to in the *To* field.

Note: If you are sending the report to more than one email address, separate the addresses with a semicolon or comma, depending on the specified mail server. The total cannot exceed 256 characters.

◆ SNMP Trap Receiver

SNMP Trap Receiver

☒ Enable SNMP Trap

☒ SNMPv3
 ☐ SNMPv2c
 ☐ SNMPv1

Receiver IP 1:

Service Port 1:

Community 1:

User name 1:

Auth-password 1:

Priv-Password 1:

Receiver IP 2:

Service Port 2:

Community 2:

User name 2:

Auth-password 2:

Priv-Password 2:

Up to four SNMP management stations can be specified. If you want to use SNMP trap notifications, do the following:

1. Check *Enable SNMP Trap*.
2. Select which version of SNMP you want to use.
3. Key in the IP address(es) and the service port number(s) of the computer(s) to be notified of SNMP trap events. The valid port range is 1–65535. The default port number is 162.

Note: Make sure that the port number you specify here matches the port number used by the SNMP receiver computer.

4. Key in the community value(s) if required for the SNMP version.
5. Key in the Auth-Password/Priv-Password that correspond to each of the stations.

Syslog Server

Syslog Server

☐ Enable Syslog Server

Server
IP :

Service
Port :

To record all the events that take place on eco PDU devices and write them to the eco PDU Syslog server, do the following:

1. Check **Enable Syslog Server**.
2. Key in the IP address and the port number of the Syslog server. The valid port range is 1-65535. The default port number is 514.

Date/Time

The Date/Time dialog page sets the eco PDU time parameters:


Date Time

Time Zone

(GMT-12:00) Eniwetok Kwajalein

☐ Daylight Savings Time

Manual Input

Date :  (YYYY-MM-DD)

Time : (HH:MM:SS)

☐ Sync with PC

Network Time
☐ Enable auto adjustment

AU | ntp1.cs.mu.OZ.AU

☐ Preferred custom server IP :

☐ Alternate time server :

AU | ntp1.cs.mu.OZ.AU

☐ Alternate custom server IP :

Adjust time every days

Adjust Time Now

Set the parameters according to the information described below.

Time Zone

- ♦ To establish the time zone that the eco PDU is located in, drop down the *Time Zone* list and choose the city that most closely corresponds to where it is located.
- ♦ If your country or region employs Daylight Saving Time (Summer Time), check the corresponding checkbox.

Manual Input

Use this section to specify the eco PDU's date and time manually.

- ♦ Click the calendar icon and click the calendar entry for the date.
- ♦ Key the time into the Time field, using the HH:MM:SS (hours, minutes, seconds) format.

Note: This section is only enabled when *auto adjustment* (in the *Network Time* section) is disabled (the checkbox is unchecked).

As an alternative to specifying the date and time by entering them into the date and time fields, you can click to put a check in the *Sync with PC* checkbox, in which case the eco PDU will take its date and time settings from the locally connected PC.

Network Time

To have the time automatically synchronized to a network time server, do the following:

1. Check the *Enable auto adjustment* checkbox.
2. Drop down the time server list to select your preferred time server
– or –

Check the *Preferred custom server IP* checkbox, and key in the IP address of the time server of your choice.

3. If you want to configure an alternate time server, check the *Alternate time server* checkbox, and repeat step 2 for the alternate time server entries.
4. Key in your choice for the number of days between synchronization procedures.

Finishing Up

When you have finished making your settings on this page, click **Save**.

After you have saved your changes, if you want to synchronize immediately, click **Adjust Time Now**.

Security

The Security page controls access to the eco PDU device.

Security

Login Failures

Allowed:

Timeout: min

Working Mode

☒ Enable ICMP

Account Policy

Minimum Username Length:

Minimum Password Length:

Password Must Contain At Least:

☐ One Upper Case

☐ One Lower Case

☐ One Number

☒ Disable Duplicate Login

Login Failures

- ♦ **Allowed** sets the number of consecutive failed login attempts that are permitted from a remote user.
- ♦ **Timeout** sets the amount of time a remote user must wait before attempting to login again after exceeding the number of allowed failures.

Working Mode

- ♦ If *ICMP* is **enabled**, the eco PDU device can be pinged. If it is not enabled, the device cannot be pinged. The default is Enabled.

When you have finished making your settings on this page, click **Save**.

Account Policy

The Account Policy section governs policies in regard to usernames and passwords.

Account Policy

Minimum Username Length :

Minimum Password Length :

Password Must Contain At Least : ☐ One Upper Case

☐ One Lower Case

☐ One Number

☐ Disable Duplicate Login

Check a policy and enter the required information in the appropriate fields.

Item	Description
Minimum Username Length	Sets the minimum number of characters required for a username. Acceptable values are from 1–16.
Minimum Password Length	Sets the minimum number of characters required for a password. Acceptable values are from 1–16.
Password Must Contain At Least	Checking any of these items requires users to include at least one of the specified items in their password. Note: This policy does not affect existing user accounts. Only new user accounts created after this policy has been enabled, and users required to change their passwords are affected.
Disable Duplicate Login	Check this to prevent users from logging in with the same account at the same time.

Login String / IP Filter / Mac Filter

Login String/IP Filter

Login String :

☐ IP Filter Enable ☒ Include ☐ Exclude

☐ MAC Filter Enable ☒ Include ☐ Exclude

■ Login String

The *Login String* entry field is used to specify a login string (in addition to the IP address) that users must include when accessing the eco PDU device with a browser. For example:

192.168.0.126/abcdefgh

- ◆ The following characters are allowed:
0–9 a–z A–Z ~ ! @ \$ * () _ ' ,
- ◆ The following characters are not allowed:
& ^ { } ' ' < > | " % " : / ? # \ [Space] + - = [] ;
Compound characters (É Ç ñ ... etc.)

Note: 1. There must be a forward slash between the IP address and the string.

2. If no login string is specified here, anyone will be able to access the eco PDU device login page using the IP address alone. This makes your installation less secure.

For security purposes, we recommend that you change this string occasionally.

■ IP Filter / MAC Filter

If any filters have been configured, they appear in the IP Filter and/or MAC Filter list boxes.

IP and MAC Filters control access to the eco PDU based on the IP and/or MAC addresses of the client computers attempting to connect. A maximum of 5 IP filters and 5 MAC filters are allowed.


To enable IP and/or MAC filtering, click to put a check mark in the *IP Filter Enable* and/or *MAC Filter Enable* checkbox.

- ◆ If the *Include* button is checked, all the addresses within the filter range are allowed access; all other addresses are denied access.
- ◆ If the *Exclude* button is checked, all the addresses within the filter range are denied access; all other addresses are allowed access.

Adding Filters


To add an IP filter, do the following:

1. Click **Add**. A dialog box similar to the one below appears:

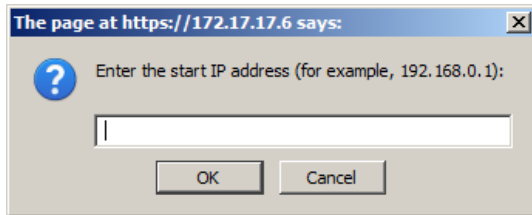

2. Specify the filter address in the dialog box (for example, 192.168.0.200), then click **OK**.

A second dialog box, similar to the one below, appears:

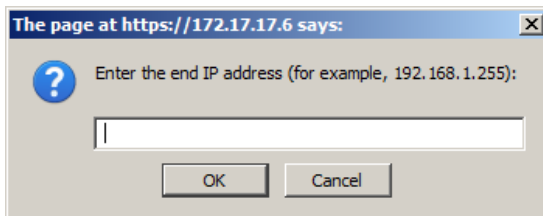


3. To filter a single IP address, key in the same address as the start IP. To filter a continuous range of addresses, key in the end number of the range (for example, 192.168.0.225).
4. After filling in the address, click **OK**.

Repeat these steps for any additional IP addresses you want to filter.

To add a MAC filter, do the following:

1. Click **Add**. A dialog box similar to the one below appears:

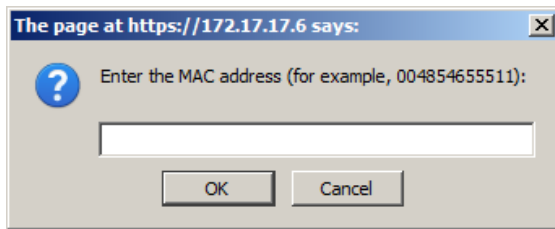

2. Specify the MAC address in the dialog box (for example, 001074670000), then click **OK**.

Repeat these steps for any additional MAC addresses you want to filter.

IP Filter / MAC Filter Conflict

If there is a conflict between an IP filter and a MAC filter – for example, where a computer's IP address is allowed by the IP filter but its MAC address is excluded by the MAC filter – then that computer's access is blocked.

In other words, if either filter blocks a computer, then the computer is blocked, no matter what the other filter is set to.

Modifying Filters

To modify a filter, select it in the IP Filter or MAC Filter list box and click **Modify**. The Modify dialog box is similar to the Add dialog box. When it comes up, simply delete the old address(es) and replace it with the new one(s).

Deleting Filters

To delete a filter, select it in the IP Filter or MAC Filter list box and click **Delete**.

Authentication & Authorization

The Authentication & Authorization page is used to set up login authentication and authorization management from external sources.

Authentication & Authorization

☐ Disable Local Authentication

RADIUS Settings

☐ Enable RADIUS

Preferred RADIUS Server IP :	<input type="text" value="0.0.0.0"/>
Preferred RADIUS Service Port :	<input type="text" value="0"/>
Alternate RADIUS Server IP :	<input type="text" value="0.0.0.0"/>
Alternate RADIUS Server Port :	<input type="text" value="0"/>
Timeout :	<input type="text" value="0"/> sec
Retries :	<input type="text" value="0"/>
Shared Secret (at least 6 characters) :	<input type="text"/>

RADIUS Settings

To allow authentication and authorization for the eco PDU device through a RADIUS server, do the following:

1. Check **Enable RADIUS**.
2. Fill in the IP addresses and service port numbers for the Preferred and Alternate RADIUS servers. The default port number for the Preferred server is 1812; the default port number for the Alternate server is 1645.

Note: Make sure that the port numbers you specify here match the port numbers used by the RADIUS servers.

3. In the *Timeout* field, set the time in seconds that the eco PDU device waits for a RADIUS server reply before it times out.
4. In the *Retries* field, set the number of allowed retries for attempting to connect to the RADIUS server.

5. In the *Shared Secret* field, key in the character string that you want to use for authentication between the eco PDU device and the RADIUS Server.
6. On the RADIUS server, set the entry for each user as follows:

su/xxxx

Where xxxx represents the Username given to the user when the account was created on the eco PDU device. The user's access rights are the ones assigned for the eco PDU device, as well. (See *User Information*, page 39.)

Note: su/user supports view ports only; su/administrator supports all eco PDU functions.

Private Certificate

When logging in over a secure (SSL) connection, a signed certificate is used to verify that the user is logging in to the intended site. For enhanced security, the *Private Certificate* section allows you to use your own private encryption key and signed certificate, rather than the default ATEN certificate.

There are two methods for establishing your private certificate: generating a self-signed certificate; and importing a third-party certificate authority (CA) signed certificate.

Generating a Self-Signed Certificate

If you wish to create your own self-signed certificate, a free utility – openssl.exe – is available for download over the web.

Obtaining a CA Signed SSL Server Certificate

For the greatest security, we recommend using a third party certificate authority (CA) signed certificate. To obtain a third party signed certificate, go to a CA (Certificate Authority) website to apply for an SSL certificate. After the CA sends you the certificate and private encryption key, save them to a convenient location on your computer.

Importing the Private Certificate

To import the private certificate, do the following:

1. Click **Browse** to the right of *Private Key*; browse to where your private encryption key file is located; and select it.
2. Click **Browse** to the right of *Certificate*; browse to where your certificate file is located; and select it.
3. Click **Upload** to complete the procedure.

Note: 1. Clicking **Restore Default** returns the device to using the default ATEN certificate.

2. Both the private encryption key and the signed certificate must be imported at the same time.
-

When you have finished making your settings on this page, click **Save**.

PDU

The *PDU* function is used to upgrade the eco PDU's firmware, and to backup and restore the device's configuration settings.

Firmware File

When you click the **PDU** tab, the display opens with the *Firmware Upgrade* menu page, which looks similar to the one below:

Firmware File

☒ Check Main Firmware Version

Energy Box Name	F/W Version
[PE5340sG]	F/W Ver:1.0.062

Filename:

Backup

Password:

Restore

Filename:

Password:

A description of the items shown in this panel are given in the table below:

Item	Description
Check Main Firmware Version	If you enable <i>Check Main Firmware Version</i> , the eco PDU's current firmware level is compared with that of the upgrade file. If the current version is equal to or higher than the upgrade version, a popup message appears, to inform you of the situation and stops the upgrade procedure.
Energy Box Name	Lists the name of the eco PDU.
F/W Version	Displays the eco PDU's current firmware version.
Filename	As new versions of the firmware become available, they are posted on our website and can be downloaded to your computer. Click the <i>Browse</i> button to select the downloaded upgrade file.
Upgrade	Click this button to upgrade the firmware of the selected devices.

■ Upgrading the Firmware

To upgrade the firmware refer to the screenshot on the preceding page, and do the following:

1. Go to our website and download the new firmware file to a convenient location on your computer.
2. Click the *Browse* button; navigate to where the firmware file is located and select it.
3. Click **Upgrade** to start the upgrade procedure.
 - ♦ If you enabled *Check Main Firmware Version* the current firmware level is compared with that of the upgrade file. If the current version is equal to or higher than the upgrade version, a popup message appears, to inform you of the situation and stops the upgrade procedure.
 - ♦ If you didn't enable *Check Main Firmware Version*, the upgrade file is installed without checking what its level is.
 - ♦ Once the upgrade completes successfully, the eco PDU resets itself.
4. Login again, and check the firmware version to be sure it is the new one.

■ Firmware Upgrade Recovery

Should the eco PDU's firmware upgrade procedure fail, and the device becomes unusable, the following firmware upgrade recovery procedure will resolve the problem:

1. Power off the device.
2. Press and hold the Reset Switch in (see page 9).
3. While holding the Reset Switch in, power the eco PDU back on.

This causes the eco PDU to use the original factory installed firmware. Once the eco PDU is operational, you can try upgrading the firmware again.

Backup/Restore

Backup/Restore gives you the ability to back up the PDU's configuration and user profile information:

Backup

To backup the device's settings do the following:

1. In the *Password* field, key in a password for the file.

Note: Entering a password is optional. If you do enter a password, make a note of it, since you will need it to be able to restore the file.

2. Click **Save**.
3. When the browser asks what you want to do with the file, select *Save to disk*; then save it in a convenient location.

Restore

To restore a previous backup, do the following:

1. Click **Browse**, navigate to the file and select it.

Note: If you renamed the file, you can leave the new name. There is no need to return it to its original name.

2. In the *Password* field, key in the same password that you used to save the file.

Note: If you did not set a password when you created the backup file, you can omit this step.

3. Select the options that are available, that you wish to restore.
4. Click **Restore**.

After the file is restored, a message appears to inform you that the procedure succeeded.

This Page Intentionally Left Blank

Safety Instructions

General

- ♦ This product is for indoor use only.
- ♦ Read all of these instructions. Save them for future reference.
- ♦ Follow all warnings and instructions marked on the device.
- ♦ Do not place the device on any unstable surface (cart, stand, table, etc.). If the device falls, serious damage will result.
- ♦ Do not use the device near water.
- ♦ Do not place the device near, or over, radiators or heat registers.
- ♦ The device cabinet is provided with slots and openings to allow for adequate ventilation. To ensure reliable operation, and to protect against overheating, these openings must never be blocked or covered.
- ♦ The device should never be placed on a soft surface (bed, sofa, rug, etc.) as this will block its ventilation openings. Likewise, the device should not be placed in a built in enclosure unless adequate ventilation has been provided.
- ♦ Never spill liquid of any kind on the device.
- ♦ Unplug the device from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- ♦ The device should be operated from the type of power source indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
- ♦ To prevent damage to your installation it is important that all devices are properly grounded.
- ♦ The device is equipped with a 3-wire grounding type plug. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not attempt to defeat the purpose of the grounding-type plug. Always follow your local/national wiring codes.
- ♦ The equipment should be installed near the wall socket outlet and the disconnect device (appliance coupler) should be readily accessible.
- ♦ Do not allow anything to rest on the power cord or cables. Route the power cord and cables so that they cannot be stepped on or tripped over.

- ♦ To help protect your system from sudden, transient increases and decreases in electrical power, use a surge suppressor, line conditioner, or uninterruptible power supply (UPS).
- ♦ Position system cables and power cables carefully; Be sure that nothing rests on any cables.
- ♦ When connecting or disconnecting power to hot pluggable power supplies, observe the following guidelines:
 - ♦ Install the power supply before connecting the power cable to the power supply.
 - ♦ Unplug the power cable before removing the power supply.
 - ♦ If the system has multiple sources of power, disconnect power from the system by unplugging all power cables from the power supplies.
- ♦ Never push objects of any kind into or through cabinet slots. They may touch dangerous voltage points or short out parts resulting in a risk of fire or electrical shock.
- ♦ Do not attempt to service the device yourself. Refer all servicing to qualified service personnel.
- ♦ If the following conditions occur, unplug the device from the wall outlet and bring it to qualified service personnel for repair.
 - ♦ The power cord or plug has become damaged or frayed.
 - ♦ Liquid has been spilled into the device.
 - ♦ The device has been exposed to rain or water.
 - ♦ The device has been dropped, or the cabinet has been damaged.
 - ♦ The device exhibits a distinct change in performance, indicating a need for service.
 - ♦ The device does not operate normally when the operating instructions are followed.
- ♦ Only adjust those controls that are covered in the operating instructions. Improper adjustment of other controls may result in damage that will require extensive work by a qualified technician to repair.
- ♦ Do not connect the RJ-11 connector marked “Sensor” to a public telecommunication network.

Consignes de sécurité

Général

- ♦ Ce produit est destiné exclusivement à une utilisation à l'intérieur.
- ♦ Veuillez lire la totalité de ces instructions. Conservez-les afin de pouvoir vous y référer ultérieurement.
- ♦ Respectez l'ensemble des avertissements et instructions inscrits sur l'appareil.
- ♦ Ne placez jamais l'unité sur une surface instable (chariot, pied, table, etc.). Si l'unité venait à tomber, elle serait gravement endommagée.
- ♦ N'utilisez pas l'unité à proximité de l'eau.
- ♦ Ne placez pas l'unité à proximité de ou sur des radiateurs ou bouches de chaleur.
- ♦ Le boîtier de l'unité est doté de fentes et d'ouvertures destinées à assurer une ventilation adéquate. Pour garantir un fonctionnement fiable et protéger l'unité contre les surchauffes, ces ouvertures ne doivent jamais être bloquées ou couvertes.
- ♦ L'unité ne doit jamais être placée sur une surface molle (lit, canapé, tapis, etc.) car ses ouvertures de ventilation se trouveraient bloquées. De même, l'unité ne doit pas être placée dans un meuble fermé à moins qu'une ventilation adaptée ne soit assurée.
- ♦ Ne renversez jamais de liquides de quelque sorte que ce soit sur l'unité.
- ♦ Débranchez l'unité de la prise murale avant de la nettoyer. N'utilisez pas de produits de nettoyage liquide ou sous forme d'aérosol. Utilisez un chiffon humide pour le nettoyage de l'unité.
- ♦ L'appareil doit être alimenté par le type de source indiqué sur l'étiquette. Si vous n'êtes pas sûr du type d'alimentation disponible, consultez votre revendeur ou le fournisseur local d'électricité.
- ♦ Afin de ne pas endommager votre installation, vérifiez que tous les périphériques sont correctement mis à la terre.
- ♦ L'unité est équipée d'une fiche de terre à trois fils. Il s'agit d'une fonction de sécurité. Si vous ne parvenez pas à insérer la fiche dans la prise murale, contactez votre électricité afin qu'il remplace cette dernière qui doit être obsolète. N'essayez pas d'aller à l'encontre de l'objectif de la fiche de terre. Respectez toujours les codes de câblage en vigueur dans votre région/pays.

- ♦ L'équipement doit être installé à proximité de la prise murale et le dispositif de déconnexion (prise de courant femelle) doit être facile d'accès.
- ♦ Veillez à ce que rien ne repose sur le cordon d'alimentation ou les câbles. Acheminez le cordon d'alimentation et les câbles de sorte que personne ne puisse marcher ou trébucher dessus.
- ♦ Pour contribuer à protéger votre système contre les augmentations et diminutions soudaines et transitoires de puissance électrique, utilisez un parasurtenseur, un filtre de ligne ou un système d'alimentation sans coupure (UPS).
- ♦ Placez les câbles du système et les câbles d'alimentation avec précaution; veillez à ce que rien ne repose sur aucun des câbles.
- ♦ Lors du branchement ou du débranchement à des blocs d'alimentation permettant la connexion à chaud, veuillez respecter les lignes directrices suivantes:
 - ♦ Installez le bloc d'alimentation avant de brancher le câble d'alimentation à celui-ci.
 - ♦ Débranchez le câble d'alimentation avant de retirer le bloc d'alimentation.
 - ♦ Si le système présente plusieurs sources d'alimentation, déconnectez le système de l'alimentation en débranchant tous les câbles d'alimentation des blocs d'alimentation.
- ♦ N'insérez jamais d'objets de quelque sorte que ce soit dans ou à travers les fentes du boîtier. Ils pourraient entrer en contact avec des points de tension dangereuse ou court-circuiter des pièces, entraînant ainsi un risque d'incendie ou de choc électrique.
- ♦ N'essayez pas de réparer l'unité vous-même. Confiez toute opération de réparation à du personnel qualifié.
- ♦ Si les conditions suivantes se produisent, débranchez l'unité de la prise murale et amenez-la à un technicien qualifié pour la faire réparer.
 - ♦ Le cordon d'alimentation ou la fiche ont été endommagés ou éraillés.
 - ♦ Du liquide a été renversé dans l'unité.
 - ♦ L'unité a été exposée à la pluie ou à l'eau.
 - ♦ L'unité est tombée ou le boîtier a été endommagé.
 - ♦ Les performances de l'unité sont visiblement altérées, ce qui indique la nécessité d'une réparation.
 - ♦ L'unité ne fonctionne pas normalement bien que les instructions d'utilisation soient respectées.

- ♦ N'utilisez que les commandes qui sont abordées dans le mode d'emploi. Le réglage incorrect d'autres commandes peut être à l'origine de dommages qui nécessiteront beaucoup de travail pour qu'un technicien qualifié puisse réparer l'unité.
- ♦ Ne connectez pas le connecteur RJ-11 portant la marque « Sensor » (Capteur) à un réseau de télécommunication public.

Rack Mounting

- ♦ Before working on the rack, make sure that the stabilizers are secured to the rack, extended to the floor, and that the full weight of the rack rests on the floor. Install front and side stabilizers on a single rack or front stabilizers for joined multiple racks before working on the rack.
- ♦ Always load the rack from the bottom up, and load the heaviest item in the rack first.
- ♦ Make sure that the rack is level and stable before extending a device from the rack.
- ♦ Use caution when pressing the device rail release latches and sliding a device into or out of a rack; the slide rails can pinch your fingers.
- ♦ After a device is inserted into the rack, carefully extend the rail into a locking position, and then slide the device into the rack.
- ♦ Do not overload the AC supply branch circuit that provides power to the rack. The total rack load should not exceed 80 percent of the branch circuit rating.
- ♦ Make sure that all equipment used on the rack – including power strips and other electrical connectors – is properly grounded.
- ♦ Ensure that proper airflow is provided to devices in the rack.
- ♦ Ensure that the operating ambient temperature of the rack environment does not exceed the maximum ambient temperature specified for the equipment by the manufacturer.
- ♦ Do not step on or stand on any device when servicing other devices in a rack.

The eco PDU's Main Power Cord

Use the power cord supplied with this package. If it becomes necessary to replace the cord supplied with this package, be sure to use a cord of at least the same standard as the one provided.



Securing the Power Cables

To secure the cables in the eco PDU's power outlets, use only the ATEN Lock-Your-Plug cable holders that have been specifically designed to work with the eco PDU. Using any other kind of cable securing device could be highly dangerous. Please contact your ATEN dealer for information about ATEN Lock-Your-Plugs.

Montage sur bâti

- ♦ Avant de travailler sur le bâti, assurez-vous que les stabilisateurs sont bien fixés sur le bâti, qu'ils sont étendus au sol et que tout le poids du bâti repose sur le sol. Installez les stabilisateurs avant et latéraux sur un même bâti ou bien les stabilisateurs avant si plusieurs bâtis sont réunis, avant de travailler sur le bâti.
- ♦ Chargez toujours le bâti de bas en haut et chargez l'élément le plus lourd en premier.
- ♦ Assurez-vous que le bâti est à niveau et qu'il est stable avant de sortir une unité du bâti.
- ♦ Agissez avec précaution lorsque vous appuyez sur les loquets de libération du rail d'unité et lorsque vous faites coulisser une unité dans et hors d'un bâti ; vous pourriez vous pincer les doigts dans les rails.
- ♦ Une fois qu'une unité a été insérée dans le bâti, étendez avec précaution le rail dans une position de verrouillage puis faites glisser l'unité dans le bâti.
- ♦ Ne surchargez pas le circuit de l'alimentation CA qui alimente le bâti. La charge totale du bâti ne doit pas dépasser 80 % de la capacité du circuit.
- ♦ Assurez-vous que tous les équipements utilisés sur le bâti, y-compris les multiprises et autres connecteurs électriques, sont correctement mis à la terre.
- ♦ Assurez-vous que les unités présentes dans le bâti bénéficie d'une circulation d'air suffisante.
- ♦ Assurez-vous que la température ambiante de fonctionnement de l'environnement du bâti ne dépasse pas la température ambiante maximale spécifiée pour l'équipement par le fabricant.
- ♦ Ne marchez sur aucun appareil lors de la maintenance d'autres appareils d'un bâti.

Le cordon d'alimentation principale de l'unité d'alimentation éco

Utilisez le câble d'alimentation fourni. Au cas où il s'avèrerait nécessaire de remplacer le cordon fourni avec l'appareil, veillez à utiliser un cordon respectant au minimum la même norme que celui d'origine.



Fixation des câbles d'alimentation

Pour fixer les câbles aux sorties d'alimentation de l'unité d'alimentation éco, utilisez uniquement les supports de câble Lock-Your-Plug d'ATEN qui ont été conçus spécialement pour être utilisés avec

l'unité d'alimentation éco. L'utilisation de tout autre type système de fixation de câble pourrait s'avérer très dangereuse. Veuillez contacter votre revendeur ATEN pour plus d'informations sur le support de câble ATEN Lok-U-Plug.

Technical Support

International

- ♦ For online technical support – including troubleshooting, documentation, and software updates: **<http://eservice.aten.com>**
- ♦ For telephone support, see *Telephone Support*, page iii

North America

Email Support		support@aten-usa.com
Online Technical Support	Troubleshooting Documentation Software Updates	http://www.aten-usa.com/support
Telephone Support		1-888-999-ATEN ext 4988

When you contact us, please have the following information ready beforehand:

- ♦ Product model number, serial number, and date of purchase.
- ♦ Your computer configuration, including operating system, revision level, expansion cards, and software.
- ♦ Any error messages displayed at the time the error occurred.
- ♦ The sequence of operations that led up to the error.
- ♦ Any other information you feel may be of help.

IP Address Determination

If you are an administrator logging in for the first time, you need to access the eco PDU in order to give it an IP address that users can connect to. There are two methods to choose from. In each case, your client computer must be on the same network segment as the eco PDU. After you have connected and logged in you can give the device its fixed network address. (See *Setup*, page 41.)

Method 1:

For computers running Windows, an IP address can be determined and/or assigned with the IP Installer utility. The utility can be obtained from the *Download* area of our web site or from the software CD. Look under *Driver/SW*, and the model of your device. After downloading the utility to your computer, do the following:

1. Unzip the contents of *IPInstaller.zip* to a directory on your hard drive.
2. Go to the directory that you unzipped the IPInstaller program to and run *IPInstaller.exe*. A dialog box similar to the one below appears:

Network Device IP Installer

Device list:

Device Name	Model Name	MAC Address	IP Address
PE8 Series	PE8208G	00-10-74-9d-08-02	192.168.0.60

Exit About

Enumerate

Protocol: IPv4 Network adapter: MAC: 00-06-7b-0a-c0-1c, IP: 192.168.52.102 Set IP

IPv4 settings

☒ Obtain an IP address automatically (DHCP)

☐ Use the following IP address:

IP address: 192 . 168 . 0 . 60

Subnet mask: 255 . 255 . 0 . 0

Default gateway: 192 . 168 . 0 . 254

☒ Obtain DNS server address automatically

☐ Use the following DNS server addresses:

Preferred DNS server: 0 . 0 . 0 . 0

Alternate DNS server: 0 . 0 . 0 . 0

IPv6 settings

☒ Obtain an IPv6 address automatically (DHCP)

☐ Use the following IPv6 address:

IPv6 address:

Subnet prefix length:

Default gateway:

☒ Obtain DNS server address automatically

☐ Use the following DNS server addresses:

Preferred DNS server:

Alternate DNS server:

(Continues on next page.)

(Continued from previous page.)

3. Select the device in the *Device List*.

Note: 1. If the list is empty, or your device doesn't appear, click **Enumerate** to refresh the Device List.

2. If there is more than one device in the list, use the MAC address to pick the one you want. The eco PDU's MAC address is located on its bottom panel.
-

4. Select either *Obtain an IP address automatically (DHCP)*, or *Specify an IP address*. If you chose the latter, fill the IP Address, Subnet Mask, and Gateway fields with the information appropriate to your network.
5. Click **Set IP**.
6. After the IP address shows up in the Device List, click **Exit** to end the program.

Method 2:

1. Set your computer's IP address to 192.168.0.XXX
Where XXX represents any number or numbers except 60. (192.168.0.60) is the default address of the eco PDU.)
2. Specify the device's default IP address (192.168.0.60) in your browser, and you will be able to connect.
3. Assign a fixed IP address for the device (see *IPv4 Configuration*, page 43), that is suitable for the network segment that it resides on.
4. After you log out, reset your computer's IP address to its original value.
5. Once you have logged in, go to Network Settings to set up the permanent IP environment (see *IPv4 Configuration*, page 43).

Method 3:

ALTUSEN eco Sensors allows you to determine/assign an IP address in order to configure a PDU device and monitor power status of the equipment connected to it. ALTUSEN eco Sensors can be obtained from the Download area of the ATEN web site.

Specifications

PE5220sA / PE5220sA-AX-J

Function		PE5220sA / PE5220sA-AX-J
Power Outlets	Direct	20
Connectors	Power Cord	1 x NEMA 5-20P or NEMA L5-20P
	Power Outlets	20 x NEMA5-15R
	Sensor	2 x RJ-11
	LAN	1 x RJ-45 Female (Silver) + LEDs (Orange/Green)
LEDs	PDU / Phase / Bank	1-digit 7-segment (Orange)
	PDU / Phase / Bank / IP	3 (Green)
	PDU / Phase / Bank / IP	3-digit 7-segment (Orange)
	Power	1 (Blue)
	LAN	1 (Orange / Green)
	Link	1 (Green)
	Sensor	2 (Green)
Switches	Reset	1 x Semi-recessed Pushbutton
	Power	1 x Non-fuse Breaker
Button		1 x Pushbutton
Power Capacity		6.2kW
O/P Rating	Per outlet NEMA5-15R	100–120V~; 50–60Hz; 12A(UL) / 15A(Max.)
	Total	100–120V~; 50–60Hz; 16A (UL), 20A (Max.)
Environment	Operating Temperature	0–50°C
	Storage Temperature	-20–60°C
	Humidity	0–80% RH Non-condensing
Physical Properties	Housing	Metal
	Weight	2.15 kg
	Dimensions (L x W x H)	69.1 x 6.6 x 4.4 cm

PE5220sB / PE5220sB-AX-J

Function		PE5220sB / PE5220sB-AX-J
Power Outlets	Direct	20
Connectors	Power Cord	1 x NEMA 6-20P or NEMA L6-20P
	Power Outlets	20 x IEC 320 C13
	Sensor	2 x RJ-11
	LAN	1 x RJ-45 Female (Silver) + LEDs (Orange/Green)
LEDs	PDU / Phase / Bank	1-digit 7-segment (Orange)
	PDU / Phase / Bank / IP	3 (Green)
	PDU / Phase / Bank / IP	3-digit 7-segment (Orange)
	Power	1 (Blue)
	LAN	10/100M
	Link	1 (Green)
Switches	Sensor	2 (Green)
	Reset	1 x Semi-recessed Pushbutton
Switches	Power	1 x Non-fuse Breaker
Button		1 x Pushbutton
Power Capacity		6.2kW
O/P Rating	Per Duplex Receptacle IEC 320 C13	100–240V~; 50–60Hz; 12A (UL) / 15A (Max.)
	Total	100–240V~; 50–60Hz; 16A (UL), 20A (Max.)
Environment	Operating Temperature	0–50°C
	Storage Temperature	-20–60°C
	Humidity	0–80% RH Non-condensing
Physical Properties	Housing	Metal
	Weight	2.15 kg
	Dimensions (L x W x H)	69.1 x 6.6 x 4.4 cm

PE5220sG

Function		PE5220sG
Power Outlets	Direct	20
Connectors	Power Input	1 x IEC 60320 C20
	Power Outlets	20 x IEC 320 C13
	Sensor	2 x RJ-11
	LAN	1 x RJ-45 Female (Silver) + LEDs (Orange/Green)
LEDs	PDU / Phase / Bank	1-digit 7-segment (Orange)
	PDU / Phase / Bank / IP	3 (Green)
	PDU / Phase / Bank / IP	3-digit 7-segment (Orange)
	Power	1 (Blue)
	LAN	10/100M
		Link
	Sensor	2 (Green)
Switches	Reset	1 x Semi-recessed Pushbutton
	Power	1 x Non-fuse Breaker
Button		1 x Pushbutton
Power Capacity		6.2kW
O/P Rating	Per Duplex Receptacle IEC 320 C13	100–240V~; 50–60Hz; 10A (CB) / 15A (Max.)
	Total	100–240V~; 50–60Hz; 15A (CB), 16A (Max)
Environment	Operating Temperature	0°C to 50°C UL 60950 (EN 60950 de-rated 0°C–30°C)
	Storage Temperature	-20–60°C
	Humidity	0–80% RH Non-condensing
Physical Properties	Housing	Metal
	Weight	2.15 kg
	Dimensions (L x W x H)	69.1 x 6.6 x 4.4 cm

PE5312sGL

Function		PE5312sGL
Power Outlets	Direct	12
Connectors	Power Cord	1 x IEC 60309 32A
	Power Outlets	Total : 12 x UK BS1363 Bank1: Outlet 1–6 ; 6 x UK BS1363 Bank2: Outlet 7–12 ; 6 x UK BS1363
	Sensor	2 x RJ-11
	LAN	1 x RJ-45 Female (Silver) + LEDs (Orange/Green)
LEDs	PDU / Phase / Bank	1-digit 7-segment (Orange)
	PDU / Phase / Bank / IP	3 (Green)
	PDU / Phase / Bank / IP	3-digit 7-segment (Orange)
	Power	1 (Blue)
	LAN	10/100M
		Link
Switches	Sensor	1 (Orange / Green)
	Reset	1 (Green)
	Power	2 (Green)
Button		1 x Semi-recessed Pushbutton
Nominal Input Power		7360 VA (Max); 50–60Hz; 32A Max
Nominal Input/Output Voltage		100–240 VAC
Power Capacity		7360 VA (Max)
Metering Accuracy		Voltage range: 100VAC ~ 250VAC +/-1% Power range: 100W ~ 5000W +/- 2% Current range: 0.1A~1A +/- 0.1A, 1A~20A +/-1%
O/P Rating	Per Output	BS1363: 13A (Max)
	Per Bank	16A (Max), TUV De-rated 15A (Max)
	Total	32A (Max), TUV De-rated 30A (Max)
Environment	Operating Temperature	0–40°C
	Storage Temperature	-20–60°C
	Humidity	0–80% RH Non-condensing
Physical Properties	Housing	Metal
	Weight	4.6 kg
	Dimensions (L x W x H)	135.9 x 6.6 x 4.4 cm

PE5312sGR

Function		PE5312sGR
Power Outlets	Direct	12
Connectors	Power Cord	1 x IEC 60309 32A
	Power Outlets	Total : 12 x UK BS1363 Bank1: Outlet 1–6 ; 6 x UK BS1363 Bank2: Outlet 7–12 ; 6 x UK BS1363
	Sensor	2 x RJ-11
	LAN	1 x RJ-45 Female (Silver) + LEDs (Orange/Green)
LEDs	PDU / Phase / Bank	1-digit 7-segment (Orange)
	PDU / Phase / Bank / IP	3 (Green)
	PDU / Phase / Bank / IP	3-digit 7-segment (Orange)
	Power	1 (Blue)
	LAN	10/100M
		Link
Switches	Sensor	1 (Orange / Green)
	Reset	1 (Green)
	Power	2 (Green)
Button		1 x Semi-recessed Pushbutton
Nominal Input Power		7360 VA (Max); 50–60Hz; 32A Max
Nominal Input/Output Voltage		100–240 VAC
Power Capacity		7360 VA (Max)
Metering Accuracy		Voltage range: 100VAC ~ 250VAC +/-1% Power range: 100W ~ 5000W +/- 2% Current range: 0.1A~1A +/- 0.1A, 1A~20A +/-1%
O/P Rating	Per Output	BS1363: 13A (Max)
	Per Bank	16A (Max), TUV De-rated 15A (Max)
	Total	32A (Max), TUV De-rated 30A (Max)
Environment	Operating Temperature	0–40°C
	Storage Temperature	-20–60°C
	Humidity	0–80% RH Non-condensing
Physical Properties	Housing	Metal
	Weight	4.6 kg
	Dimensions (L x W x H)	135.9 x 6.6 x 4.4 cm

PE5340sB / PE5340sJ

Function		PE5340sB / PE5340sJ
Power Outlets	Direct	40
Connectors	Power Cord	1 x NEMA L6-30P (cord)
	Power Outlets	40 IEC 320 C13
	Sensor	2 x RJ-11
	LAN	1 x RJ-45 Female (Silver) + LEDs (Orange/Green)
LEDs	PDU / Phase / Bank	1-digit 7-segment (Orange)
	PDU / Phase / Bank / IP	3 (Green)
	PDU / Phase / Bank / IP	3-digit 7-segment (Orange)
	Power	1 (Blue)
	LAN	10/100M
	Link	1 (Green)
Switches	Sensor	2 (Green)
	Reset	1 x Semi-recessed Pushbutton
Switches	Power	2 x 16A Branch Breaker
Button		1 x Pushbutton
Power Capacity		6.2kW
O/P Rating	Per Duplex Receptacle IEC 320 C13	100–240V~; 50–60Hz; 12A (UL) / 15A (Max.)
	Total	100–240V~; 50–60Hz; 24A (UL), 30A (Max.)
Environment	Operating Temperature	0–50°C
	Storage Temperature	-20–60°C
	Humidity	0–80% RH Non-condensing
Physical Properties	Housing	Metal
	Weight	4.90 kg
	Dimensions (L x W x H)	135.9 x 6.6 x 4.4 cm


PE5340sG

Function			PE5340sG
Power Outlets	Direct		40
Connectors	Power Input		IEC 60309 32A
	Power Outlets		40 IEC 320 C13
	Sensor		2 x RJ-11
	LAN		1 x RJ-45 Female (Silver) + LEDs (Orange/Green)
LEDs	PDU / Phase / Bank		1-digit 7-segment (Orange)
	PDU / Phase / Bank / IP		3 (Green)
	PDU / Phase / Bank / IP		3-digit 7-segment (Orange)
	Power		1 (Blue)
	LAN	10/100M	1 (Orange / Green)
		Link	1 (Green)
	Sensor		2 (Green)
Switches	Reset		1 x Semi-recessed Pushbutton
	Power		2 x 16A Branch Breaker
Button			1 x Pushbutton
O/P Rating	Per Duplex Receptacle IEC 320 C13		100–240V~; 50–60Hz; 10A
	Total		100–240V~; 50–60Hz; 30A (TUV), 32A (Max.)
Environment	Operating Temperature		0–40°C
	Storage Temperature		-20–60°C
	Humidity		0–80% RH Non-condensing
Physical Properties	Housing		Metal
	Weight		4.9 kg
	Dimensions (L x W x H)		135.9 x 6.6 x 4.4 cm

Administrator Login Failure

If you are unable to perform an Administrator login (because the Username and Password information has become corrupted, or you have forgotten it, for example), you can clear the login information with the following procedure:

1. Disconnect all devices and peripherals connected or plugged into the PDU.
2. Power off the eco PDU and remove its housing.
3. Short the jumper labeled J3 (PIN1 and PIN2).

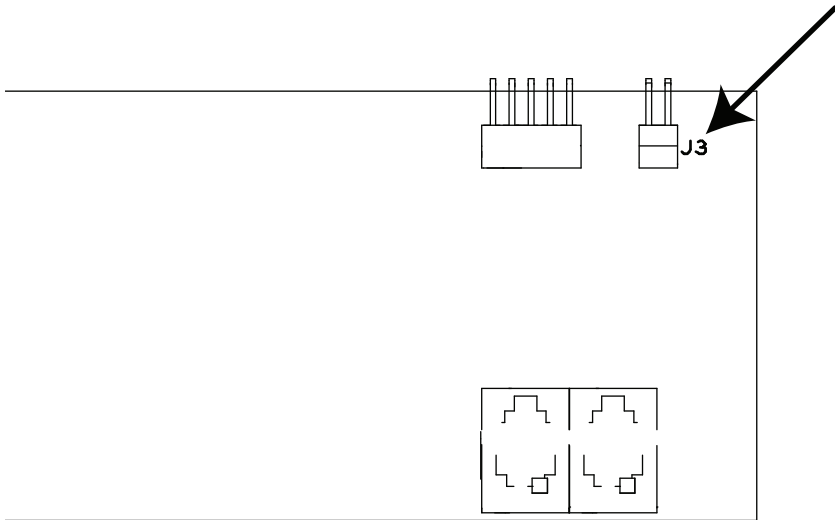

4. Power on the eco PDU.
5. After the beep indicates its been successfully powered on, power off the PDU.
6. Remove the jumper cap from J3.
7. Close the housing and start the eco PDU.
After you start, you can use the default Username and Password to log in.

Limited Warranty

ATEN warrants this product against defects in material or workmanship for a period of one (1) year from the date of purchase. If this product proves to be defective, contact ATEN's support department for repair or replacement of your unit. ATEN will not issue a refund. Return requests can not be processed without the original proof of purchase.

When returning the product, you must ship the product in its original packaging or packaging that gives an equal degree of protection. Include your proof of purchase in the packaging and the RMA number clearly marked on the outside of the package.

This warranty becomes invalid if the factory-supplied serial number has been removed or altered on the product.

This warranty does not cover cosmetic damage or damage due to acts of God, accident, misuse, abuse, negligence or modification of any part of the product. This warranty does not cover damage due to improper operation or maintenance, connection to improper equipment, or attempted repair by anyone other than ATEN. This warranty does not cover products sold AS IS or WITH FAULTS.

IN NO EVENT SHALL ATEN'S LIABILITY EXCEED THE PRICE PAID FOR THE PRODUCT. FURTHER, ATEN SHALL NOT BE RESPONSIBLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THE PRODUCT, ITS ACCOMPANYING SOFTWARE, OR ITS DOCUMENTATION. ATEN SHALL NOT IN ANY WAY BE RESPONSIBLE FOR, WITHOUT LIMITATION, LOSS OF DATA, LOSS OF PROFITS, DOWNTIME, GOODWILL, DAMAGE OR REPLACEMENT OF EQUIPMENT OR PROPERTY, AND ANY EXPENSES FROM RECOVERY, PROGRAMMING, AND REPRODUCTION OF ANY PROGRAM OR DATA.

ATEN makes no warranty or representation, expressed, implied, or statutory with respect to its products, contents or use of this documentation and all accompanying software, and specifically disclaims its quality, performance, merchantability, or fitness for any particular purpose.

ATEN reserves the right to revise or update its product, software or documentation without obligation to notify any individual or entity of such revisions, or update.

For details about extended warranties, please contact one of our dedicated value added resellers.